
PGM-100P1MD

SERVICE MANUAL

Japanese Model US/Canadian Model AEP Model Chassis No. SCC-N06A-A

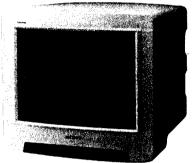

SPECIFICATIONS

Picture performance

Video image area Approx. 284 x 214 x 354 mm (w/h/

diag) (Approx. 11¹/₄ x 8¹/₂ x 14 inches) Resolution Horizontal: Max. 1,280 dots

Vertical: Max. 1,024 lines

Standard image area Approx. 284 x 212 x 354 mm (w/h/

diag) (Approx. 111/4 x 83/8 x 14 inches)

Deflection frequencyHorizontal: 30 to 65 kHz

Vertical: 50 to 120 Hz

Imputs

Video (R/G/B) BNC connector (x3), 0.7 Vp-p

Sync on green: 0.3 Vp-p, negative Audio (1) Phono jack (×1), -5 dBua), more than

47 kilo-ohms

Horizontal sync (HD)

BNC connector (×1), TTL level Vertical sync (VD)

BNC connector (x1), TTL level

a) O dBu = 0.775 Vr.m.s.

Outputs

Video (R/G/B) BNC connector (x3), loop-through Automatic 75-ohm termination

Audio (1) Phono jack (×1), loop-through

Horizontal sync (HD)

BNC connector (×1), loop-through

Automatic 2-kilo-ohm termination Vertical sync (VD)

BNC connector (×1), loop-through

Automatic 2-kilo-ohm termination

Speaker output Output level: 0.2 W

DC OUT

G eneral

CRT P-22 phosphor

Power consumption 130 W (max.)

7 W (in standby mode)

100 – 120 V \sim , 50/60 Hz, 1.8 A 220 – 240 V \sim , 50/60Hz, 1.0 A Power requirements

Operating temperature

0 to +40°C (32 to 104°F)

St-orage temperature -20 to +60°C (-4 to 140°F)

画像系

有効表示画面

約284×214×354 mm (幅/高さ/対角)

解像度 水平:最大1,280ドット

垂直:最大1.024ライン

表示画面

約284×212×354 mm(幅/高さ/対角)

偏向周波数 水平:30~65 kHz 垂直:50~120 Hz

入カ

映像 (R/G/B) 端子:

BNC型(x3)、0.7 Vp-p

(Gチャンネルに負の同期信号がある場合

は、内部同期で使用可。0.3 Vp-p)

音声 (♪) 端子: ピンジャック (×1)、-5 dBu³)、47 kΩ以上

水平同期(HD)端子:

BNC型 (×1) 、TTLレベル

垂直同期(VD)端子:

BNC型 (×1)、TTLレベル

a) 0 dBu = 0.775 Vr.m.s.

出力

映像 (R/G/B) 端子:

BNC型(×3)、ループスルー

75Ω自動終端機能付き

音声(♪)端子: ピンジャック(x1) 、ループスルー

水平同期 (HD) 端子:

BNC型(×1)、ループスル・

2 kΩ自動終端機能付き

垂直周期 (VD) 燃子:

BNC型 (×1) 、ループスルー

2kΩ自動終端機能付き 0.2 W

内蔵スピーカー出力 DC OUT出力端子

TRINITRON® COLOR GRAPHIC MON TOR

SOMY.

Operating atmospheric pressure

700 to 1,060 hPa

Storage atmospheric pressure

500 to 1,060 hPa

Operating humidity 30 to 85% (no condensation)

Storage humidity 10 to 90%

Dimensions (w/h/d) Approx. 368 x 343 x 391 mm

(Approx. 14½ x 135% x 15½ inches)

not incl. projecting parts and controls Approx. 15 kg (33 lb 11 oz)

Accessories supplied

AC power cord (1) AC plug holder (1)

Warranty (1)

Optional accessories

Monitor stand SU-556 Video cable SMF-400

• Evaluated to EN60601-1, UL2601-1, CSA601.1

· Type of protection against electric shock:

Class I equipment

Degree of protection against harmful ingress of water:
 Ordinary equipment

• Degree of safety of application in the presence of a flammable anaesthetic mixture:

Not protected equipment

Mode of operation:

Continuous operation

 Information concerning type and frequency of technical maintenance:

Not need maintenance equipment

Design and specifications are subject to change without notice.

WARNING!!

AN ISOLATION TRANSFOMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.

THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!! COMPONENTS IDENTIFIED BY SHADING AND MARK & ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

その他

 CRT
 P-22蛍光体

 消費電力
 130 W (最大)

費電力 130 W (最大) 7 W (スタンバイ時)

電源 100-120 V~、50/60 Hz、1.8 A

220-240 V∼, 50/60 Hz, 1.0 A

動作温度 0~+40℃

保存温度 -20~+60℃

動作湿度 30~85% (結露なきこと)

動作気圧 700~1,060 hPa

保存気圧 500~1,060 hPa

保存湿度 10~90%

最大外形寸法(輻/高さ/奥行き)

約368×343×391 mm

質量 約15 kg

付属品 電源コード (1)

電源プラグホルダー(1)

取扱説明書(1) 保証書(1)

サービス窓口・ご相談窓口のご案内(1)

本機の仕様および外観は改良のため予告なく変更することがありますが、ご了承ください。

ATTENTION!!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÁSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÁSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS ÁLA SÉCURITÉ!!


LES COMPOSANTS IDENTIFIÉS PAR UNE TRAVIE ET PAR UNE MAPQUE ∆ SUR LES SCHÉMASDE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIECES CONT D'UNE IMPORTANCE CRITICUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE IST CRITIQUE POUR LA SÉCURITÉ FONCTIONNEMENT SONT IDENTIFIES DANSLE PRÉSENT MANUEL. SUIVRE CES PROCÉDUIES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQUUN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

SAFETY CHECK-OUT

(US Model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

- Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
- Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
- Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
- Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
- Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
- 6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
- 7. Check the condition of the monopole antenna (if any). Make sure the end is not broken off, and has the plastic cap on it, Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.
- 8. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
- Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described below.

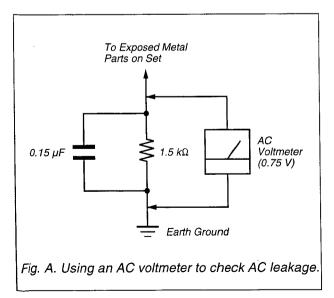

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers).

Leakage current can be measured by any one of three methods.

- A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
- A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
- 3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

HOW TO FIND A GOD EARTH GROUND

A cold-water pipe is guaranteed earth ground; the coverplate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe is not accessible, connect a 6O-100 wattstrouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both sltos, if necessafy, to locate the hot side of the line, the lamp should light atnormal brilliance if the screw is at ground potentioal. (See Fig. §)

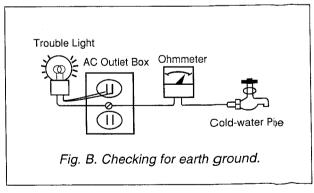


TABLE OF CONTENTS

Sec	ction.	<u>Title</u> <u>Po</u>	<u>ige</u>		目 次	
1.	GEN	IERAL		1.	概要	
	1-2. 1-3.	Features	8 9		1-1. 特長 1 1-2. 各部の名称と働き 1 1-3. 準備 1 1-4. 調整のしかた 1	12 13
2.	DIS	ASSEMBLY		2.	外し方	
	2-2. 2-3. 2-4.	Rear Cover Remobal	16 17 17		2-1. リヤーカバーの外し方 1 2-2. A基板の外し方 1 2-3. U基板の外し方 1 2-4. D基板の外し方 1 2-5. ブラウン管の外し方 1	16 17 17
3.	SAF	ETY RELATED ADJUSTMENTS	20	3.	安全関連調整 2	21
4.	CIR	CUIT ADJUSTMENT	22	4.	電気調整 2	24
5.	DIA	GRAMS	27	5.	ダイヤグラム 2	27
	5-2. 5-3.	Block Diagram	29 30		5-1. ブロックダイヤグラム 2 5-2. 基板配置図 2 5-3. 回路図, プリント図 3 5-4. 半導体外形図 2	29 30
6.	EXI	PLODED VIEWS	45	6.	分解図	15
7.	ELE	ECTRICAL PARTS LIST	49	7.	電気部品表2	19

INFORMATION

This product complies with Swedish National Council for Metrology (MPR) standards issued in December 1990 (MPR II) for very low frequency (VLF) and extremely low frequency (EFL).



As an ENERGY STAR Partner, Sony Corporation has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づく第一種情報技術装置です。こ の装置を家庭環境で使用すると電波妨害を引き起こすこ とがあります。この場合には使用者が適切な対策を講じ るよう要求されることがあります。



Energy Starの協賛会社として、ソニー株式会社は、本機 がパワーセービング機能に関するEnergy Starガイドラ(ンに準拠していることを保証いたします。

本機は、低周波磁界・低周波電界並びに静電気に対し スウェーデンの規格であるMPR-IIのガイドラインに準処 しております。

サービス用のマニュアル

安全のために

設置や保守、点検、修理などを行う前に、この 「安全のために」と、サービス用のマニュアル をよくお読みください。

サービス技術者へ



警告

ソニー製品は安全に十分に配慮して設計されています。しかし、電気製品はサービス時に間違った扱い方 をすると、火災や感電などにより死亡や大けがなど人身事故につながることがあり、危険です。

この[安全のために]は事故を防ぐために重要な注意事項を示しています。この[安全のために]及び別冊のオペレーションマニュアルの[Δ警告Δ注意]をよくお読みの上、安全に設置や保守、点検、修理などを行ってください。

この「安全のために」は、製品全般の注意事項が記されておりますので、この機器をサービスする時には当てはまらない内容も含まれております。



警告表示の意味

このサービス用のマニュアルおよび製品では、次のような表示をしています。表示の内容をよく理解してから本文をお読みください。

⚠ 警告

この表示の注意事項を守らないと、火災や感電などにより死亡や大けがなど人身事故につながることがあります。

注意を促す記号



注章



火災



咸雷

行為を指示する記号



プラグをコン セントから抜く



強制

⚠ 警告





下記の注意を守らないと、

火災や感電による死亡や大けがにつながることがあります。



. 感電にご注意を


- ・部品交換の場合は感電の危険があるので電源 プラグを抜いてください。
- ・内部には高電圧の部分があり、通電時において は感電の危険がありますので充分ご注意くだ さい。



強制

2. 指定部品を使用する

回路図, 部品表に▲印で指定されている部品は 安全重要部品ですので指定のものをご使用くだ さい。

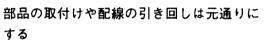

- ・チューブやテープなどの絶縁材料を使用した部品,及びプリント基板から浮かして取付けた部品を元通りにする。
- ・引き回しやクランパーで発熱部品,高圧部品及 び可動部分に接近しないように処理したハーネ スの引き回しを元通りにする。



 ブラウン管の取扱いは丁寧に行う (モニター、CRTプロジェクター、ビューファインダーの場合)

ブラウン管に衝撃を与えると爆縮の恐れがあり ます。取扱いに充分ご注意ください。



5. X 線についてのご注意

X線に対しては、ブラウン管、高圧周辺回路等に 配慮し安全を確保しています。従って、高圧周辺 回路を修理する時はブラウン管など指定の部品を 使用し、回路変更は絶対に行わないでください。 指定以外の修理は高圧回路の電圧が上昇し、ブラ ウン管から X 線が増加し、健康に悪影響があり ます。



電池についてのご注意

- ・電池は、正しく交換しないと爆発する危険があります。電池を交換する場合には必ずマニュアルで指定している電池を使用してください。
- ・火の中に入れないでください。ショートさせた り、分解、加熱しないでください。発熱、発 火、破裂の恐れがあります。
- ・使用済電池は,端子(金属部分)にテープを貼る などの処理をし,指定の方法で廃棄してくだ
- ・使用済ニカド電池はリサイクル協力店にご持参 ください。



7. レーザー光を直視しない

レーザー光放射による被爆を受けると、目に損傷を与える危険があります。

光学ブロックの調整やシールドケースを外すとき は、以下の注意を厳守してください。

- ・対レーザー光線保護眼鏡を正しく着用する。
- マニュアルにしたがって作業する。
- ・シールドケースを外したまま,機器を放置しない。
- ・整備作業終了後, ただちにシールドケースを正 しく取り付ける。



8. ラックマウントした機器を2台以上同時に引き出さない。又、手や指をはさまない。

- · 2台以上同時に引き出すと、機器の重みでラックが転倒し、大けがの原因になります。
- ・一度にラックから引き出すのは1台だけにして ください。また、ラックが転倒・移動しないよ うに適切な処置を取ってください。
- ・ ラックマウントした機器を収納するときおよび 引き出すとき, 手や指をはさむと, けがの原因 となります。



9. サービス後は安全点検を

サービスのために取り外したネジ、部品、配線が もとどおりになっているか確認してください。 またサービスした箇所の周辺の部品及び線材の損 傷してしまったところがないかなどを点検してく ださい。

・感電・漏電を防ぐために金属部と電源プラグの 絶縁チェックを行ってください。

(絶縁チェックの方法)

電源コンセントから電源プラグを抜き、電源スイッチをいれます。500 V絶縁抵抗計を用vで電源プラグのそれぞれの端子と外部露出金属部との間で、絶縁抵抗値が $1M\Omega$ 以上であること。この値以下の時はセットの点検修理が必要です。

△警告 安全のために

ソニーのモニターは正しく使用すれば事故が起きないように、安全には十 分配慮して設計されています。しかし、内部に非常に高い電圧を使用して いるので、まちがった使いかたをすると、火災や感電などにより死亡や大 けがなど人身事故につながることがあり、危険です。

事故を防ぐために次のことを必ずお守りください。

安全のための注意裏項を守る

4~6ページの注意事項をよくお読みください。製品全般の安全上の注意事 項が記されています。

8ページの「使用上のご注意」もあわせてお読みください。

定期点検をする

5年に1度は、内部の点検を、お買い上げ店またはソニーのサービス窓口に ご依頼ください(有料)。

故障したら使わない

すぐに、お買い上げ店またはソニーのサービス窓口にご連絡ください。

万一、異常が起きたら

- 煙が出たら
- 異常な音、においがし たら
- ・ 内部に水、異物が入っ たら
- モニターを落とした り、キャビネットを破 損したときは



- 電源を切る。
- 2 電源コードや接続ケーブルを 抜く。
- ❸ お買い上げ店またはソニーの サービス窓口に連絡する。

警告表示の意味

この取扱説明書および製品で は、次のような表示をしていま す。表示の内容をよく理解して から本文をお読みください。

この表示の注意事項を守らな いと、火災や感電などにより 死亡や大けがなど人身事故に つながることがあります。

注意

この表示の注意事項を守らな いと、感電やその他の事故に よりけがをしたり周辺の物品 に損害を与えたりすることが あります。

注意を促す記号







行為を禁止する記号







行為を指示する記号



アース線を 接続せよ



強制 セントから抜く



-7-

Features

This is a medical-use monitor designed for use with IBM or compatible computers.

Location and Function of Parts and Controls

Auto degauss

The screen is degaussed automatically when the power is turned on.

Power saving

On sensing the absence of sync signals for a certain period, the monitor enters standby mode to reduce power consumption.

Preset and user-defined video modes

This monitor has 6 preset video modes for the most popular industry standards.

Multiscan Technology will perform all of the complex adjustments necessary to ensure a high quality picture by reproducing any video signals having a horizontal For less common modes, the monitor's Digital frequency between 30 and 65 kHz.

28 S. C.	VGA Graphic ¹⁾	VESA	VESA ²⁾	Macintosh 16" Color®	VESA ²⁾	VESA2
Vertical	60 Hz	75 Hz	85 Hz	75 Hz	75 Hz	80 Hz
Property of the Party of the Pa	31.5 kHz	46.9 kHz	53.7 kHz	49.7 kHz	60.0 kHz	64.0 kHz
	640 x 480	800 × 600	800 x 600	832 x 624	1024 x 768	1280 x 1024 64.0 kHz
9	_	2	3	4	5	9

program supplied with your video card and select the highest available refresh rate (vertical frequency) to For Windows4, users, check the manual and utility maximize monitor performance.

- Recommended horizontal timing

 Horizontal sync width should be: >1.0 µsec.

 Horizontal blanking width should be: >3.6 µsec.

etronics Standard Association.

a the United Status and other countries.

ଛ

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remein as in the manual.

SECTION 1 GENERAL

(1)

SANTA B

+01

ÿ⊕

0 ₹•

9

8

PGM-100P1MD

Lights up when the • (lock) switch on the rear is set ■ ~ (LOCK) indicator Press to show the Color Temperature display on the C C TEMP: color temperature) button screen for the color temperature adjustment.

to the upper position (ON). No operation is possible.

⑤ ☼ (power) switch and indicator

The indicator lights green when the monitor is ready to operate, and lights orange when it is not ready (with the mains supply switch on the rear panel. the main supply switch turned on).

Lights up when the power saving function is used. ⑤ ☆ (POWER SAVING) indicator (See page 30.)

Press to show the Geometry display on the screen for

Ø ○ □ (GEOM: geometry) button

the picture rotation and pincushion distortion

adjustments.

Turns on or off the monitor.

Press to show the Size display on the screen for the

picture size adjustment.

(SIZE: picture size) button

To isolate the monitor from the mains supply, turn off This power switch is a functional on/off switch only.

⑤ ① ←/→ (-/+) (CONTRAST) buttons

Press to show the Contrast/Brightness display on the

⑤ ↓ ↓/↑ (-/+) (BRIGHTNESS) buttons

location, picture size, picture rotation, and color

temperature.

Press to adjust the picture brightness, picture

screen for the picture brightness adjustment.


Press to show the Center display on the screen for the

picture location adjustment.

(CENT: picture location) button

- Press to show the Contrast/Brightness display on the screen for the picture contrast adjustment.
 - · Press to adjust the picture contrast, picture location, picture size, pincushion distortion, and color temperature.

Roar Panel

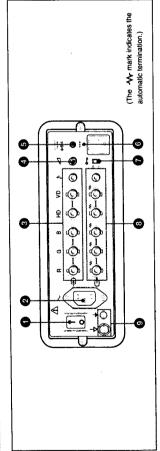

Mains supply switch

To isolate the monitor from the mains supply on the rear, switch this to the "O" (off) position. Switches the mains supply on or off.

Connect the supplied AC power cord to this socket and to a wall outlet.

(input) connectors

Connect to the output connectors of the computer.

R/G/B input connectors (BNC)

Connect to the video output (R/G/B) connectors. HD input connector (BNC)

Connect to the horizontal sync signal output connector. VD input connector (BNC)

Connect to the vertical sync signal output connector. ∫ (audio) input jack (phono)

4 (volume) control

Connect to the audio output jack.

Adjusts the sound output level through the built-in speaker.

⑤ DC OUT 5V/1A ↔ e ◆ connector

ou can use this connector as a power source for other equipment.

@ --- (reset) button

Press to reset the adjustments you have made back to Refer to "Resetting" on page 30 for details. the factory settings.

Setting this switch to the upper position (ON) disables all adjustments. To operate the monitor, set this switch to the lower position (OFF). 7 - (lock) switch

Connect to the input connectors of another monitor or (output) connectors

Loop-through output connectors of the R/G/B input connectors. Connect to the video input (R/G/B) connectors. When a cable is connected to the corresponding input connector is released. connecter, the 75-ohm termination of the R/G/B output connectors (BNC)

HD output connector (BNC)

connector. Connect to the horizontal sync signal input Loop-through output connector of the HD input connector. When a cable is connected to this connecter, the 2-kilo-ohm termination of the corresponding input connector is released.

VD output connector (BNC)

connector. Connect to the vertical sync signal input Loop-through output connector of the VD input connector. When a cable is connected to this connecter, the 2-kilo-ohm termination of the corresponding input connector is released.

(audio) output jack (phono)

Loop-through output jack of the h (audio) input jack. Connect to the audio input jack.

🚨 ∜/ 🛨 (ground) terminal

Connect to the equipotential plug to bring the various parts of a system to the same potential. ⇒: Equipotential terminal

Release lever

+ : Functional earth terminal Connect the earth.

Preparations

operating the monitor, and how to connect to other This section explains preparation required before equipment. For detailed information on connecting the monitor to other equipment, refer also to the instruction manuals supplied with the equipment.

Note

Always turn off the power to the monitor and other equipment before making connections.

Connecting the AC Power Cord


Connect the supplied AC power cord to the ~ (AC input) socket and to a wall outlet.

Cautions on power connection

- Use the supplied AC power cord
- Turn off the mains supply switch before connecting or removing the AC power cord.
 - · Make sure that the power supply conforms to the voltage rating in "Specifications" on page 31.

To connect an AC power cord securely with the AC plug holder

Before connecting the AC power cord to the ~ (AC connecting an AC power cord securely with the AC input) socket and to a wall outlet, we recommend plug holder as follows.

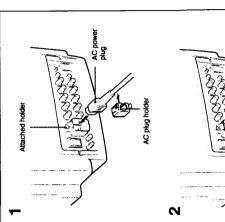

- Then attach the supplied AC plug holder on the top Plug the AC power plug into the attached holder. of the AC power cord.
- Slide the AC plug holder over the cord until it locks. N


To disconnect the AC power cord

Note

discharge any static electricity from the CRT surface. (power) switch, before turning off the mains supply switch then disconnecting the AC power cord to Wait at least 30 seconds after turning off the U


Pull out the AC plug holder while pressing the release

Connecting a Cable to the BNC Connector

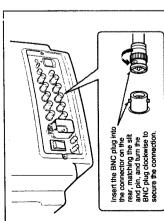

Before connecting a computer, see "Important safeguards/notices for use in the medical environments" on page 21. Connect a coaxial cable with the BNC plugs (video cable) to the BNC connectors on the rear panel as illustrated.

Connecting to a Computer

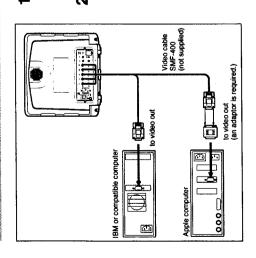

With the computer turned off, attach the coaxial cable with the BNC plugs (video cable) to the video output terminals of the computers.

With the monitor turned off, attach one end of the AC power cord to the monitor and the other end to an AC power outlet. (See page 26.) N

- 10 -


whenever the same video mode is used. A total of 10 Screen Display). Once you make adjustments on the You can adjust the picture on the screen (OSD: Onscreen, they are stored in memory and are called up user-defined video modes can be stored. If the 11th mode is entered, it will replace the first one.

Before making adjustments, turn on the monitor and feed a video signal from the connected computer or work station.

Adjusting the Picture Brightness

The adjustments you make will be applied to all input signals.

The Contrast/Brightness display appears. Press the ♦ ♦/♠ (-/+) button once.

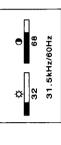

BRIGHTNESS SRIGHTNESS

2 Press and hold the ☆ ♦/ቁ (-/+) button to adjust the picture brightness.

♦ (-): to decrease the picture BRIGHTNESS THE SS

↑ (+): to increase the picture brightness. brightness.

The Contrast/Brightness display disappears a few seconds after you release the button.

* The Contrast/Brightness display show the horizontal and vertical frequencies of the input signal at the bottom.

Adjusting the Picture Contrast

The adjustments you make will be applied to all input signals.

By using the SU-556 Monitor Stand (not supplied), the monitor can be tilted and swiveled.

Placing the monitor on an optional stand

For details on attachment, refer to the instruction manual of the monitor stand.

Press the (▶ ←/→ (-/+) button once. The Contrast/Brightness display appears.



31.5kHz/60Hz 32 □

68

2 Press and hold the **①** ← / ← (-/+) button to adjust the picture contrast.

← (-): to decrease the picture SONTRAST +01

→ (+): to increase the picture contrast. contrast.

The Contrast/Brightness display disappears a few seconds after you release the button.

Adjusting the Picture Location

The adjustments you make will be applied only to the input signal currently received.

The Center display appears. 1 Press the 🖰 🛈 button.

88 32

2 For vertical adjustment:

Press and hold the \\(\tilde{\tilde}\): \\
\bullet \(\delta\) \\
\displies \quad \(\delta\) \\
\displies \quad \(\delta\) \\
\displies \quad \(\delta\) \\
\displies \quad \quad

♦ (-): to move the picture BHIGHTNESS BHIGHTNESS **+** ☆ **-**

♠ (+): to move the picture up.

Press and hold the $\bigcirc -/+$ (-/+) button. For horizontal adjustment:

CONTRAST TONITRAST +01

→ (+): to move right. ← (-): to move left.

The Center display disappears about 20 seconds after you release the button.

Pressing the O O button also removes the Center

27

Adjustments

Adjusting the Picture Size

The adjustments you make will be applied only to the input signal currently received.

The Size display appears. Press the () () button.



For vertical adjustment: N

⊕

Press and hold the ♦ 4/4 (-/+) button.

↓ (-): to diminish the picture BRIGHTNESS + | | |

♣ (+): to enlarge the picture

Press and hold the $\mathbf{O} \leftarrow / \leftarrow / +)$ button. For horizontal adjustment:

SONTRAST TO SONTRAST

+01

- 11 -

← (-); to diminish the picture → (+): to enlarge the picture size.

The Size display disappears about 20 seconds after you Pressing the (1) (4) button also removes the Size release the button.

display.

Adjusting the Picture Rotation.

The adjustments you make will be applied to all input signals.

The Geometry display appears. Press the O C button.

□ 8 Press and hold the $\diamondsuit \cdot 4/4 (-/+)$ button to rotate چ[اם 8 N

the picture.

↓ (-): to rotate the picture counterclockwise. to rotate the picture clockwise. ÷ BRIGHTNESS THE STATE OF THE ST + | | |


The Geometry display disappears about 20 seconds after you release the button

Pressing the \(\mathcal{G}\) \(\mathcal{G}\) button also removes the Geometry display.

Adjusting the Pincushion Distortion

The adjustments you make will be applied only to the input signal currently received.

The Geometry display appears. Press the O 🖸 button.

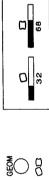

Press and hold the $\bigcirc \leftarrow / \leftarrow / \rightarrow (-/+)$ button.

N



→ (+): to pull out the picture

sides.

Pressing the $\bigcirc \square$ button also removes the Geometry The Geometry display disappears about 20 seconds after you release the button. display.

Adjusting the Color Temperature

The adjustments you make will be applied to all input signals.

The Color Temperature display appears. 1 Press the © button.

☐ 5000K 9300K © **©**

2 To select either 5000K or 9300K:

The selected color temperature is indicated in Press $\bigcirc \leftarrow / \leftarrow / \leftarrow)$ button. yellow.

SONTRAST TO SONTRAST +01

↑ (-): to select 5000K. → (+): to select 9300K. To select a color temperature in between 5000K and 9300K:

When you press the button, the most recent Press and hold the $\diamondsuit +/-$ (-/+) button. adjusted color temperature is called up. ♦ (-): to decrease the color BRIGHTNESS THE STATE OF THE ST

(+): to increase the color temperature. temperature. The Color Temperature display disappears about 20 seconds after you release the button. remperature display.

contrast, picture location, picture size to reset the picture brightness, picture Press the *** button on the rear panel ou can reset the adjustments you made back to the factory settings.

and pincushion distortion only for the video mode currently used.

Press and hold the +++ button for more adjustments for all input signals. than two seconds to reset all

Other Operations and Functions

You can adjust the sound output level through the built-in speaker by using the \angle (volume) control on Adjusting Sound Output Level

he rear panel.

You can disable the button operations by setting the •• (lock) switch on the rear panel to the upper Prohibiting the Button Operations

To operate the monitor, set this switch to the lower position (OFF). position (ON).

Power Saving Function

This monitor meets the power saving guidelines set by absence of the sync signal coming from the computer, stringent NUTEK 803299 (TCO92) guidelines. It is capable of reduced power consumption when used the EPA Energy Star Program as well as the more Management Signaling (DPMS). By detecting the it will reduce the power consumption as follows: with a computer equipped with Display Power

function will automatically put the monitor into activeoff state even if the power switch is turned on. Once Without any video signal input, the power saving the horizontal and vertical syncs are detected, the monitor automatically starts operating normally.

	ŧ	Poser			
-	Normal operation	100%		green on	off
2	Suspend (1st step of power saving)	approx. 10% sec.	approx. 3 sec.	green on	orange flashing
3	Active-off (2nd step of power saving)	арргок. 7%	approx. 10 sec.	green on	orange on
4	Power-off	approx. 7%		orange on	off
2	Mains power off	%0		off	. Ho

は溺を完全に遮断したいときは、背面の 手債数スイッチをオ

フにしてください。

きはインジケーターがオレンジ色に点灯します。

このスイッチがオンのときはインジケーターが縁色に点灯し このスイッチがオフのときでも、下電搬スイッチがオンのと きは本機へは追溯が供給されています(待機状態)。このと

◎ ⑴ (陶巌) スイッチカイソジケーター **本機の電影をオン/オフします。** 6

(2) 0 #⊕ **₹** 8 }€ 0 PGM-100P1MD

いと自動的に電源が待機(アクティブオフ)状態になり、電力

消費を節約できます。

像信号であれば、デジタルマルチスキャン機能により必要な

ターによっては垂直/水平方向の両像の大きさや位置を微調

整する必要があります。)

他の人力信号に対しても、水平掃波数30~65kHzの範囲の映 異整が行われ、高両質の両像が表示されます。 (コンピュー

があらかじめ設定されています。

本機は、工場出荷時には下記の代表的な6桶類の映像モード

本機の対応信号

本機の電源が入っていても、ビデオ信号が「定期間入力されな

パワーセーバング藝統

ブラウン脊は、電源を入れたときに自動的に消磁されます。

血唇浴或囊鳃

本機はDOS/Vコンピューターに対応したモニターです。

色温度を調整したいときに押して、色温度の調整両面を出し (C TEMP:色温度) ボタン

背面の ニスイッチが上側 (ON) になっているときに点ばし

(LOCK:ロック) インジケーター

ます。このときは、本機を操作することはできません。

⑤ ☆ (POWER SAVING:バワーセービング) インジ

パワーセービング機能が働いているときに点灯します。

(15ペーツ 物屋) ケーター

両像の傾きや木平方向の糸巻き歪みを調整したいときに押し ● ○ ○ (GEOM: 気を/糸巻を張み) ボタン

|**両像の大きさを調整したいときに押して、サイズの調整両面** を出します。

画像の位置を調整したいときに押して、画像位置の調整画面 ● ○ ○ (CENT: 國像位置) ボタン を借します。

単像の明るさを離散したいときに押して、コントラスト ⑤ ☆ (◆/♠, ※/+) (BRIGHTNESS:明るさ) ボタン /明るさの攝整両面を出します。

輯像の明るさ・位置・大きさ・傾き・色温度などの調整 前を変更するときに押します。 両後のコントラストを調整したいときに押して、コント

度などの調整値を変更するときに押します。

て、傾き/糸巻き点みの調整両面を出します。

● 0 (★/★,ミ/+) (CONTRAST:コントラスト) ボ

両後のコントラスト・位置・大きさ・糸巻き在み・色温 ラスト/明るさの調整西面を信します。

各部の名称と働き

THE TABLE

Windows⁴⁾をお使いのお客様は

本機の性能を充分に活用するために、コンヒューターやビデオボー ド仆城のユーティリティープログラムを用いて、最適のリフレッ ショレート(垂直周波数)を遊択したください。

以下の木ドタイミング条件でお使いください。 **木ドンシンキング軸:3.6μs以上** 水平同湖橋:1.0ps以上

4) Windowsは、米||||Microsoft Corporationの米||村およびその他の||司 における登録稿標です。Windowsの正式名称はMicrosoft Windows Operating System 7%

VGA グラフィック ^{||}

31.5KHz 46.9kHz

640×480

800×600 800×600

Q

VESA 2 VESA 2

財像モード

垂直周波数 ZH09 75Hz 2H28

(ドット×ライン) | 水平周波数 |

g

Macintosh 16tカラー^{3,}

75Hz 75 Hz

832×624

4 വ

53.7kHz 49.7kHz 60.0kHz 64.0kHz

ო

VESA 2 VESA 21

ZH09

1280×1024


9

1024×768

Ţ

名部の名称と働き

イイン画館

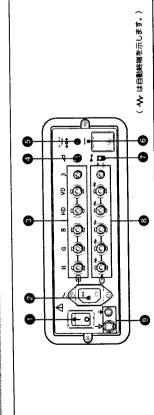

このスイッチをオフ(0)にすると、本機には電源が供給さ 本機の主電源をオン/オフします。 ● 士鶴源スイッチ れません。

け属の電源コードを接続します。 ② ~ (AC IN) ソケット

コンピューターの映像出力端子と接続します。 R/G/B (歌奏) 入力編子 (BNC型) ● (大大) 無子

HD(水平ディワイ)入力編子(BNC型) VD(極層ディレイ)入力業子(BNC型) 水平同期信号の出力端子と接続します。

RGB映像信号の出力端子と接続します。

垂直同期信号の出力端子と接続します。 い(音声) 入力端子 (ピンジャック) 音声信号の出力路子と接続します。

● △ (音音) 製飾つまみ

内蔵スピーカーの音韻を調節します。

⑤ DC OUT 5V/1A eee ジャック 外部機器にDC循鎖を供給します。

● *** (ジセット) ボタン

◆詳しくは、15ページの「工場出荷時の設定に戻す」をご覧くださ 調整値を工場出荷時の値に戻します。

このスイッチを上側に合わせると、前面パネルのすべてのボ ロック) スイッチ

タンやスイッチ類が機能しなくなります。

VTRや他のモニターの映像人力端子と接続します。 ● (HH) 無子

この端子にケーブルを接続すると、人力端子の75Ω終端は行 R/G/B(映像)入力端子に接続したRGB映像信号のループ スルー出力端子。RGB映像信号の人力端子と接続します。 R/G/B (歌像) 出力差子 (BNC型) 動的に解放されます。

す。この端子にケーブルを接続すると、入力端子の2kA終端 ループスルー出力端子。水平同期信号の人力端子と接続しま HD (水平ディレイ) 人力端子に接続した水平同期信号の HD(米甲ドィフィ)田力義子(BNC型) は们動的に解放されます。

す。この塩子にケーブルを接続すると、人力塩子の2kの終端 ループスルー出力端子。垂直同期信号の入力端子と接続しま VD(垂直ディレイ)人力端子に接続した垂直同期信号の VD (無層ディフィ) 斑力雑子 (BNC型) は自動的に解放されます。

1) (音声) 人力端子に接続した音声信号のループスルー出力 備子。育声信号の入力端子と接続します。 い(権制) 田力肇子 (ガンジャック)

(● 4/ 中(年間位/推修アース) 維子 等電位プラグを接続します。 **| | (機能アース) 端子** 今 (等電位) 端子

十二十個大技術 十十

ここでは本機を使う前に必要な準備や他の機器との接続の方 法にしいた説明します。

▶本機を他の機器と接続するときは、それらの機器の取扱説明書もあ わせてご覧ください。

本機や接続する機器の電源は、接続が終了するまで入れない

でください。

■第コードの取り付けかた

付属の電源コードを背面パネルのへ (ACIN) ソケットに差 し込み、電凝コンセントに接続して使用してください。

付属の電源コードを使用してください。


• 電源コードを抜き差しするときは、必ず主電源スイッチを 切ってから行ってください。

• 本機を指定外の電源電圧で使用しないでください。詳しく は、19ページの「仕様」をご覧ください。

電源ブラグホルダーを使って電源コードを確実に取り付けるには

電源プラグホルダーを使って確実に電源コードを取り付けます。

- 電源コードを背面のへ (ACIN) ソケットに差し込み、 電瓶プラグホルダーを亀巌コードに取り付ける。

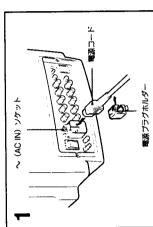

2 転添プラグホルダーを本体側のホルダーに、固定レバー がロックするまで、はめこむ。 制御コードをはずすには


CRT管面に帯電した静電気を放電させるために、①(電線)

を切り、電凝コードをはずしてください。

電源プラグホルダーの固定レバーを上下からはさんでロック を外し、引き抜きます。



接続ケーブルの取り付けかた(BNC型端子の場合)

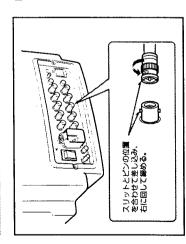

図のように接続して使用してください。


画面をご希望の状態に調整できます。調整画面を見ながら調 また、調整値は自動的に記憶されます。調整後、同じ信号が 信号に最適な状態になります。本機は10種類の調整値を記憶 入力されると、記憶された調整値が呼び出され、本機は入力 できます。11種類目の調整が行われると、1番目の調整値が 消去されます。

ピューター/ワークステーションから信号を入力してくださ 調整を始める前に、本機の電源を人れ、接続しているコン

画像の明るさを調整する

この調整は、すべての人力信号に対して有効です。

コントラスト/明るさの調整画面が表示されます。 ■ ☆ ◆/◆ (一/+) ボタンを辞す。

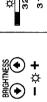

2 本機の電源を切った状態で、(4属の電源コードを本機と

アデギ出力へ

DOS/Vコンピューター

縄源コンセントにしなぐ。(11ページを参照)

取験信め ケーブル SMF400 (空売り)

| コンピューターの電源を切った状態で、映像信号ケーブ **ルをコンピューターのビデオ出力越子にしなべ。**

• 31.5kHz/60Hz 32

◆ (+) ... 明るくなります。 ◆ (一) ...暗くなります。 2 ☆ ↓/↑ (→+) ボタンを押して、調覧する。 BRIGHTNESS


* コントラスト/明るさの調整画面には現在受信している人力信号の ボタンから指を難して2秒たつと、調整両面は消えます。 水平開波数/垂直開波数も表示されます。

画像のコントラストを開発する

この調整は、すべての人力信号に対して有効です。

コントラスト/明るさの調整画面が表示されます。 ■ ○ ←/→ (一/+) ボタンを描す。

SONTRAST TO SONTRAST

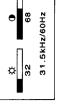

◆ (一) コントラストが蝎 2 0 ←/→ (-/+) ボタンを押して、調整する。

◆ (+) コントラストが樹 CONTRAST +01

くなります。

くなります。

ボタンから指を難して2秒たつと、調整断面は消えます。

画像の位置を調整する

この調整は現在受信している人力信号に対してのみ有効です。

画像位置の調整画面が表示されます。 〇〇ボタンを押す。

9

8

2 垂直方向に関整するには

◆ (一) トに移動します。 ♣ (+) L:に移動します。 ☆ ◆/◆ (一/+) ポタンを押す。 BRIGHTNESS THE SS + ☆ |

水平方向に調整するには

◆ (→) 左に移動します。 ↓ (+) 存に移動します。 CONTRAST

+

20秒間、どのボタンも押さないでいると、調整両面は自動的 **調整両面を消すには、〇〇のボタンをもう・度押してくださ**

に消えます。

モニタースタンドを使うときは

Macintosh用変換ア ダプター (別売り)

アデギ出力へ

000

アップルコンピューター

別売りのモニタースタンドSU-556を取り付けて本機を使うと、本機を傾けたり左右に回転したりできます。 収り付け方法については、モニタースタンドの収扱説明書をご覧ください。

2

ロソカゴーダーの指揮のつがか

調整のしかた

画像の大きさを屏壁する

この調整は現在受信している入力信号に対してのみ有効です。

に消えます。

日田ボタンを押す。

⊕

Œ 8

サイズの調整画面が表示されます。

2 垂直方向に調整するには

◆ (一) ……小さくなります。 ↑ (+) 大きくなります。 ☆◆/◆ (一/+) ボタンを押す。 BRIGHTNESS + ☆ |

水平方向に調整するには

★ (一) …… 小さくなります。 ➡ (+) 大きくなります。 ●★/◆ (一/+) ボタンを描す。 CONTRAST 調整両面を消すには、 🗗 🕒 ボタンをもう・度押してくだ

20秒間、どのボタンも押さないでいると、調整両面は自動的

に消えます。

画像の掻きを開発する

この調整は、すべての人力信号に対して有効です。

に消えます。

傾き/糸巻き点みの調整画面が表示されます。 〇ロボタンを座す。



2☆√/★ (→/+) ボタンを押して、調整する。

 ↓ (一) …… 画像が反時計回りに

 回転します。 ★ (+) 画像が時計回りに回

20秒間、どのボタンも押さないでいると、調整画面は自動的 親を画面を消すには、〇 〇 ハボタンをもう一度押してくだ

水平方向の糸巻き歪みを開墾する

この調整は現在受信している入力信号に対してのみ有効です。

傾き/糸巻き歪みの調整両面が表示されます。 ロロボタンを軒む。



2 ●/→ (-/+) ボタンを押す。

↑ (一) 画像の函館がへい



◆ (+) … 単像の酒側がふくら みます。



20秒間、どのボタンも押さないでいると、調整両値は自動的 劉駿画面を消すには、〇 口ボタンをもう ・度押してくだ

色温度を開整する

この調整は、すべての入力信号に対して有効です。

色温度の調整画面が表示されます。

© 5000K 9300K 50

2 5000Kまたは9300Kを観ぶには

選択された色温度は黄色で表示されます。 □ ★/★ (一/+) ボタンを辞す。

◆ (-) 5000Kを選ぶとき **◆ (+)9300Kを選ぶとき** SONTRAST TIMEST +

5000Kから9300Kの間で、お好きな色温度を設定する

ボタンを押すと、最後に設定した色温度が表示されま ☆◆/◆ (-/+) ボタンを描す。

♦ (一) 色温度が低くなりま **↑** (+) 色温度が痛くなりま

20秒間、どのボタンも押さないでいると、講整所前は自動的 調整画面を消すには、 ② ボタンをもう・度押してくださ

に消えます。

工場出荷時の設定に戻す

• 背面の--- ボタンを押すと、現在人力さ 調整した設定値を工場出荷時の設定に戻せます。

るさ、コントラスト、水平方向および 糸巻き歪みが工場出備時の設定に戻り れている映像モードに対して両面の明 垂直方向の画像の位置および大きさ、

• • ・・ボタンを2秒以上押し続けると、す べての映像モードに対するすべての設 定が工場出荷時の設定に戻ります。

その他の操作と機能

背面の 4 (音量) 調節つまみを使って、スピーカーの音量 ボリュームを調節する も調節できます。

このスイッチを上隅(ON)に合わせると、前面のボタンや 背面の 🕶 (ロック) スイッチを使って、前面のすべてのボ ボタン操作を禁止する タン操作を禁止できます。

このスイッチを下側 (OFF) に合わせます。 ボタン操作禁止を解除するには

スイッチ類が機能しなくなります。

パワーセービング機能

(TC092) のパワーセービングガイドラインに適応していま 身が送られてこないと、下記のようにパワーセービング状態 ているコンビューターに接続して使用しているときにパワー セービング機能がはたらきます。コンピューターから同期信 す。DPMS(Display Power Management Signaling)に対応し 本機はEPA(Energy Star Program) とNUTEK 803299 になります。


|動的に待機(アクティブオフ)状態になります。水平、垂 直同期信号が人力されると、自動的に通常の動作状態になり ビデオ信号が人力されていないとき本機の電源を入れると、

	状態	電力消費	復帰す るまで の時間	ტ (電源) インジケーター	な(パワー セービング) インジケーター
_	通常動作	96001	Ч	緑点灯	消灯
ત	サスペンド 2 (第一段階)	₩010%	#13#W	緑点灯	オレンジ 点滅
ო	アクティブ オフ (第二段階)	\$0.70¢	₩010₩	緣点灯	オレンジ 点灯
4	電源オフ	\$ 9796	Ч	オレンジ 点灯	消灯
D.	5 主電源オフ	% 0	Ч	消灯	以似

SECTION 2 DISASSEMBLY 2. 外し方


2-1. REAR COVER REMOVAL

2-1. リヤーカバーの外し方

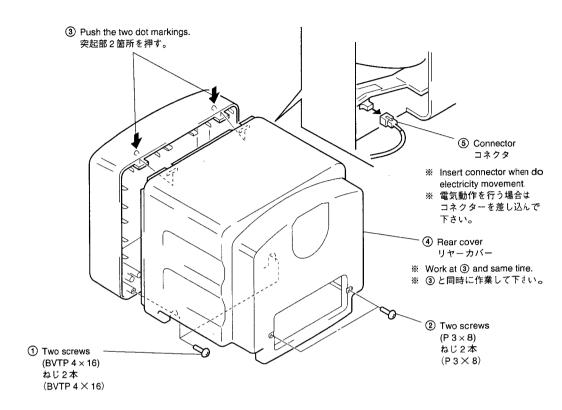


2-2. A BOARD REMOVAL

2-2. 基板の外し方

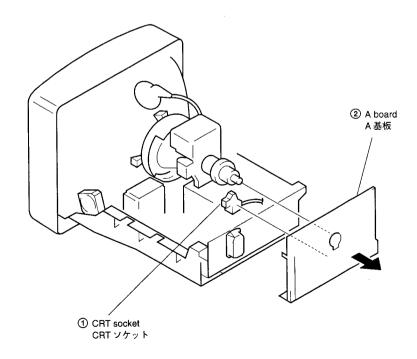


2-3. U BOARD REMOVAL

2-3. U基板の外し方

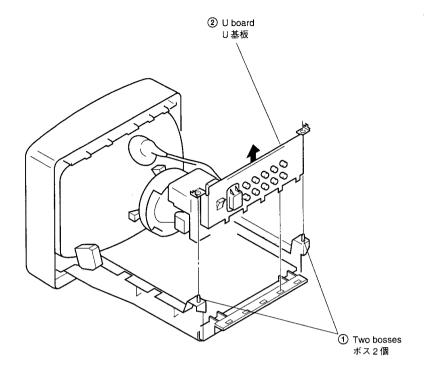


2-4. D BOARD REMOVAL

2-4. D基板の外し方

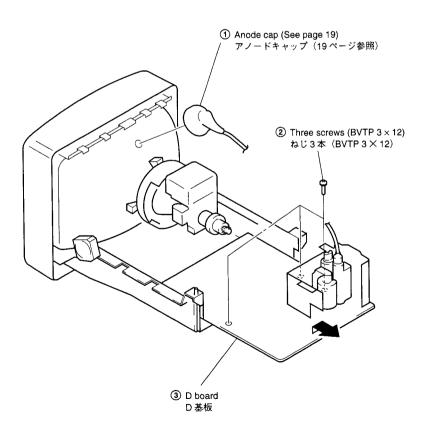

2-5. PICTURE TUBE REMOVAL


2-5. ブラウン管の外し方

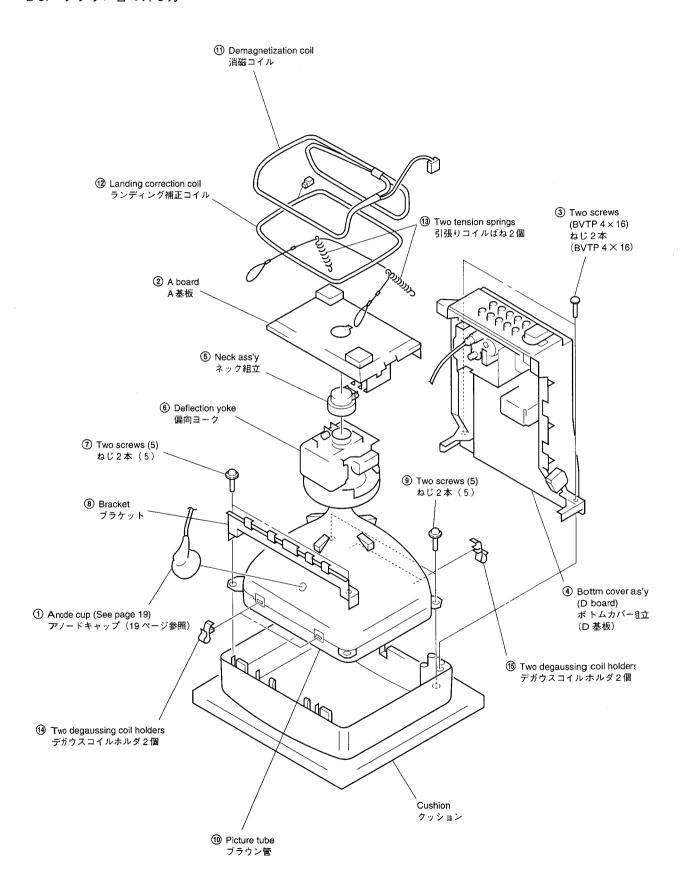


REMOVAL OF ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.


• REMOVING PROCEDURES

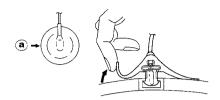

1 Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.

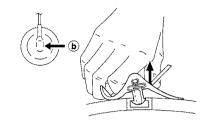


② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.

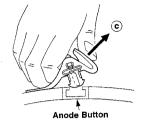


When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ⑤.

• HOW TO HANDLE AN ANODE-CAP

- 1) Don't hurt the surface of anode-caps with shartp shaped material!
- Don't press the rubber hardly not to hurt inside of anode-caps! A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly! The shatter-hook terminal will stick out or hurt the rubber.

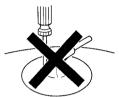


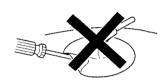


●アノードキャップの外し方

注) 感電防止の為に、ブラウン管を交換するときは、必ずブラウン管のアノードボタン(端子)及びアノードキャップの高圧端子を、CRT シールド又はCRTカーボン塗布部にアースして下さい。

●外し方手順

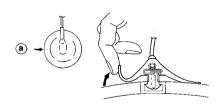

ゴムキャップの片側②方向をめくります。

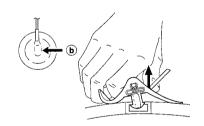

② 親指で矢印®方向へ強く押し上げます。




③ アノードボタンから片側が外れたら, ゴムキャップをめくり,押した方向と 逆の⑥方向へ抜けば,外れます。

●取扱上の注意点

- アノードキャップの外観に傷を付けないこと。 (周囲のシャープエッジに注意)
- ② アノードキャップの内部に傷を付けないこと。 (アノードキャップの内部に SH 端子と呼ばれる金具が入って おり、ゴム部に外圧が加わると内部が傷ついてしまう。)
- ③ ブラウン管装着時、ゴム部を必要以上にめくり上げない。



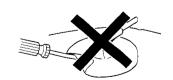

SECTION 3 SAFETY RELATED ADJUSTMENT

When replacing or repairing the shown below table, the following operational checks must be performed as a safety precaution against X-rays emissions from the unit.

	Part Replaced (►)
SCREEN	RV470

	P	art Replaced ()
HV Regulator Circuit	D board	IC501, FBT (T501), R457, R475, R487, R508, R509, R512, RV470,C509, C526, C541, C542, C580, C585
HV Hold-Down Circuit	D board	IC500, IC501, D407, D515, R472, R491, R492, R494, R496, R577, C402, C403, C404, FBT (T501) • Mounted D board
Beam Current Protector Circuit	D board	IC500, IC501, D596, D597, R450, R459, R460, R498, R970 C528, C549, C938 • Mounted D board

* Confirm one minute later turning on the power.

a) HV Regulator Check

- 1) Input white cross hatch signal. (fH = 63.9 kHz)
- 2) Minimum CONT and BRT controls.
- 3) Cut off Screen VR (G2).
- 4) Input voltage: $120 \pm 2 \text{ VAC}$
- 5) Confirm that the voltage is within the voltage range shown below.

Standard voltage: Less than 25.5 KV

b) HV Hold-Down Check

Using an external DC Power supply, apply the voltage shown below between cathode of D407 and GND, and confirm that the HV Hold-Down circuit works. (TV Raster disappears)

Standard voltage: $20.0 \pm 0.05 \text{ V DC}$

Check Condition

• Input voltage: 120 ± 2 V AC

Input signal : Any pattern (fH = 63.9 kHz)
 Controls : CONT and BRT → Minimum

: Screen VR (G2) → Cutoff

c) Beam Protector Check-1 (Software logic)

1) Using an external DC power supply, apply the voltage 7.00 ± 0.05 VDC between pin ① of FBT (T501) and GND, and confirm that the voltage of both ends C938 is with in the voltage range shown below.

Standard voltage: Less than 3.26 V DC

Check Condition

• Input voltage: 120 ± 2 V DC

Input signal : Any pattern (fH = 63.9 kHz)
 Controls : CONT and BRT → Minimum

: Screen VR $(G2) \rightarrow Cutoff$

d) Beam Protector Check-2 (Hardware logic)

- 1) Applying specified external DC voltage 5.00 V DC at between C938 (Side of anode) and GND.
- 2) Confirm that the beam current protector circuit is to be activated when to make short between pin ① of FBT (T501) and GND.

e) +B MAX Check

- 1) Input white cross hatch (fH = 63.9 kHz) signal.
- 2) Minimum CONT and BRT controls.
- 3) Input voltage: $120 \pm 2 \text{ V AC}$

Note: Use NF power supply or make sure that distortion factor is 3% or less.

4) Confirm that the voltage is within the voltage range shown below.

Standard voltage: $140 \pm 2 \text{ V}$

3. 安全関連調整

以下の基板及び部品を交換あるいは修理した場合、本体からの X線に対しての安全策として以下の調整及び動作確認を 必ず行なって下さい。

	■マーク部品
スクリーン	RV470

		☑マーク部品
HVレギュレータ 回路チェック	D 基板	IC501, FBT (T501), R457, R475, R487, R508, R509, R512, RV470, C509, C526, C541, C542, C580, C585
HV ホールド ダウンチェック	D 基板	IC500, IC501, D407, D515, R472, R491, R492, R494, R496, R577, C402, C403, C404, FBT(T501) ・マウント済 D 基板
ビーム電流 プロテクター 回路チェック	D基板	IC500, IC501, D596, D597, R450, R459, R460, R498, R970, C528, C549, C938 ・マウント済 D 基板

- ※電源を切って1分間以上経過したことを確認のうえ、作業を行って下さい。
- a) HV レギュレータ回路チェック
 - 1) 白クロスハッチ信号(fH=63.9kHz)を入力する。
 - 2) CONT, BRT & MIN.
 - 3) Screen VR(G2)を Cutoffo
 - 4) 120±2 V AC を入力する。
 - 5) 電圧が下記規格内であることを確認する。 規格: 25.5 KV 以下
- b) HV ホールドダウンチェック
 - 1) D 基板上の D407 のカソードと GND 間に、外部 DC 電源から下記の電源を加えた時、HV ホールドダウン 回路が動作してラスターが消えることを確認する。

規格: 20.0±0.05 V DC

確認条件

· 入力電圧 : 120±2 V AC

· 入力信号 : 任意パターン(fH=63.9kHz)

・コントロール : CONT、BRT→MIN : Screen VR(G2)→Cutoff c) ビーム電流プロテクター回路チェック-1 (Software logic)

 D 基板上の FBT(T501)の①ピンと GND 間に、外 部 DC 電源から 7.00±0.05 V DC を加え、C938 の 両端に下記の電圧が出ていることを確認する。

規格: 3.26 V DC 以下

確認条件

· 入力電圧 : 120±2 V AC

· 入力信号 : 任意パターン(fH=63.9kHz)

・コントロール : CONT、BRT→MIN

: Screen VR (G2)→Cutoff

d) ビーム電流プロテクター回路チェック-2

(Hardware logic)


- 1) C938 の陽極端子と GND 間に 5 V DC を加える。
- 2) FBT(T501)の①ピンと GND 間をショートした時ラスターが消えることを確認する。
- e) 十B MAX チェック
 - 1) 白クロスハッチ信号(fH=63.9kHz)を入力する。
 - 2) CONT, BRT & MIN.
 - 3) 120±2 V AC を入力する。

注:NF電源を使用、又は歪み率 3%以下。

4) 電圧が下記規格内であることを確認する。 規格:140±2 V

SECTION 4 CIRCUIT ADJUSTMENTS

Connect the communication cable of the computer to the connector located on the D board on the monitor. Run the service software and then follow the instruction.

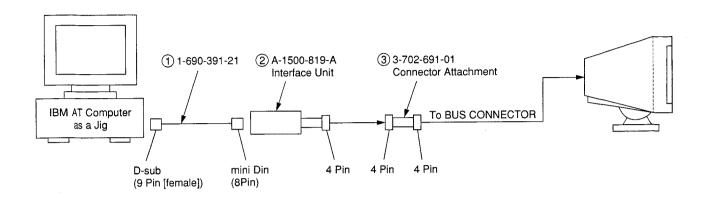

*The parts above ($\textcircled{1} \sim \textcircled{3}$) are necessary for DAS adjustment.

H.CENT Adjustment

(This should be performed before Convergence Adjustment.)

- 1. Receive the picture with maximum frequency. (Dot signal)
- 2. Adjust "BRT" to "255", "H.SIZE" to "-127".
- 3. Set the lever switch (S500) to the CRT neck side (position "a"). Select the minimum point of right and left difference of the raster at (S501). Then fine adjust H.CENT at switch (S500).
 - * Correction distance change-over: \$500



X Correction direction change-over: S501



Landing Rough Adjustment

- 1. Enter the full white signal.
- 2. Adjust the contrast to the maximum.
- 3. Make the screen monogreen.
- 4. Reverse the DY, and adjust coarsely the purity magnet so that a green raster positions in the center of screen.
- Moving the DY forward, adjust so that an entire screen becomes monogreen.
- 6. Adjust the tilt of DY, and fix lightly with a clamp.

Landing Fine Adjustment

- 1. Place the set in the Helmholtz coil.
- 2. Enter a green signal only.
- 3. Degauss the entire screen with hand-degausser.
- 4. Attach a wobbling coil to the specified position of CRT neck.
- 5. Attach a landing adjuster sensor on the CRT.
- Using a landing checker, adjust the DY position, purity, tilt of DY.
- 7. Clamp the DY screw.

Clamping torque : $22 \pm 2 \text{ kgcm} (2.2 \pm 0.2 \text{ N·m})$

Convergence Rough Adjustment


- 1. Enter the white crosshatch signal.
- Adjust roughly the horizontal and vertical convergence at four-pole magnet.
- 3. Adjust roughly HMC and VMC at six-pole magnet.

Convergence Fine Adjustment

* Set DY four-pole magnet to mechanical center




* This should be prime mode.

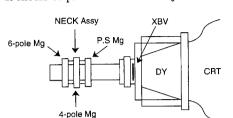


- 1. Receive R.B. cross-hatch.
- 2. Adjust H.STAT and V.STAT at four-pole magnet.

< 4 Pole Magnet >

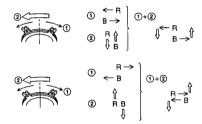

- 3. Receive White cross-hatch.
- 4. Adjust HMC and VMC at six-pole magnet.


< 6 Pole Magnet >

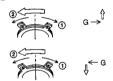

- 5. Receive R.B. cross-hatch.
- 6. Adjust XBV at DY four-pole magnet.


XBV Correction



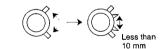

_Set the finger

- 1) Open DY four-pole. (Do not move H.STAT)
- 2) Re-adjust V.STAT with four-pole at NECK Ass'y.

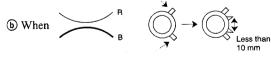

- 1) Close DY four-pole. (Do not move H.STAT)
- 2) Re-adjust V.STAT with four-pole at NECK Ass'y.
- 7. Repeat the above procedure so that R.G.B. will be on X. Y axis,
- 8. Adjust H.TILT by swinging the DY neck right and left.
- 9. Adjust XCV with XCV core.

XCV movement



10. Adjust V.TILT with TLV VR.

TLV movement




11. Adjust Y.CLOTH with YCH VR.

YCH movement




12. Paint lock the four-, six-pole Mg.


< VR Adjustment on DY >

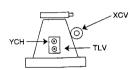


< Zero Position NECK Ass'y >

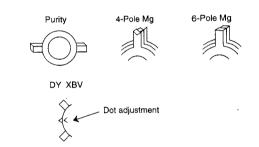

Vertical and Horizontal Position and Size Specification

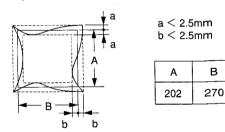


Convergence Specification

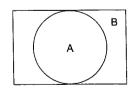

 $A \le 0.30$ mm $B \le 0.35$ mm

4. 電気調整

パーソナルコンピュータとモニター(D基板のコネクタ)とを下図のように接続して、サービスソフトを起動させ、画面上の指示に従って下さい。

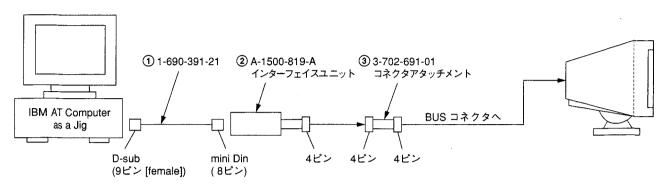


*DAS調整用として、上記 ① ~ ③ を必ずご用意下さい。


● H.CENT 調整

(本調整は、コンバーゼンス調整の前に行う事)

- 1) 最大周波数の画を受像する(ドット信号)。
- 2) "BRT"を"255"、"H. SIZE"を"-127"にする。
- S500のレバーを CRT ネック側 (a の位置) にする。
 S501でラスターの左右差の最小点を選び、更に S500 を切り換えて H.CENT を微調整する。
 - ※ 補正の大きさ(移動量)切り換え:S500

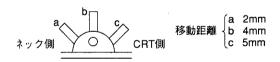

※ 補正方向(極性)切り換え:S501

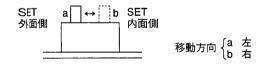

● ランディング粗調整

- 1. 全白信号(又は、黒ドット信号)を入力する。
- 2. CONT を MAX にする。
- グリーン単色にする。
 注: SG の Rch、Bch 出力を OFF にする。
- 4. DY を後退させ、グリーンラスターが画面センターになる様にピューリティーマグネットで粗調する。
- 5. DY を前進させ、画面全体がグリーン単色になる様に調 整する。
- 6. DY の傾きを調整し、止め金具で軽く固定する。

● ランディング精調整


- 1. セットをヘルムホルツコイルの中に入れる。
- 2. グリーン単色信号を入力する。
- 3. CRT 面をハンドディガウサーで消磁する。 オートディガウスする。
- 4. ウォーブリングコイルを CRT ネックの指定箇所に収付ける。
- 5. CRT 面にランディング調整機のセンサーを取付ける。
- 6. ランディングチェッカーで DY 位置・ピューリティー・ DY の傾きを調整する。
- DY ネジを締め付ける。
 締付トルク: 22 ± 2kg cm (2.2±0.2Nm)

● コンバーゼンス粗調整

- 1. 白クロスハッチ信号(黒字に白線のハッチ信号)をを像する。
- 2. 4 極 Mg で、H 方向・V 方向のコンバーゼンスを且調 する。
- 3. 6極 Mgで、HMC・VMC を粗調する。


● コンバーゼンス精調整

- ※ 調整前に DY の 4 極 Mg をメカニカルセンターにしてお く事。

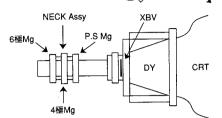


- 1) R·B のクロスハッチを受像する。
- 2) 4極 Mg にて、H.STAT、V.STAT を調整する。

<4極 Mg>

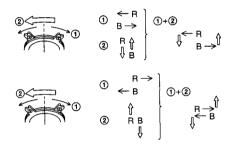


- 3) 白のクロスハッチを受像する。
- 4) 6極 Mg にて、HMC、VMC を調整する。

<6極 Mg>

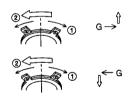

- 5) R·B のクロスハッチを受像する。
- 6) DY の 4 極 Mg にて、XBV を調整する。

XBV の補正方法

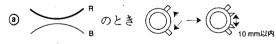

- DYの 4 極を開く(この時、H.STAT は動かさない事。)
- 2) NECK Assy の 4 極で V.STAT を再調する。



- DYの4極を閉じる(この時、H.STAT は動かさない事。)
- 2) NECK Assy の 4 極で V.STAT を再調する。

- 7) 上記 1)~6)の調整を繰り返し、X·Y 軸上の縦横線共 に、R·G·B が重なる様にする。
- 8) H.TILT を、DY 横首振りで補正する。
- 9) XCV を、XCV コアで補正する。

XCV の動き B


10) V.TILT を、TLV VR で補正する。

11) Y.CLOTH を、YCH VR で補正する。


YCH の動き




12) NECK Assy の 4、6 極 Mg、DYの 4 極 Mg を、ペイント ロックする。

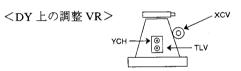

<NECK Assy のゼロ位置>

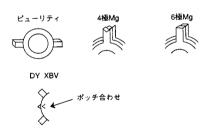


● 垂直、水平の位置及びサイズ規格

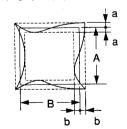

a < 2.5mm b < 2.5mm

Α	В
202	270


● コンバーゼンス規格

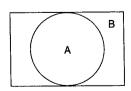


 $A \le 0.30$ mm $B \le 0.35$ mm

VIENIO
· · · · · · · · · · · · · · · · · · ·
· · · · · · · · · · · · · · · · · · ·
•
······································




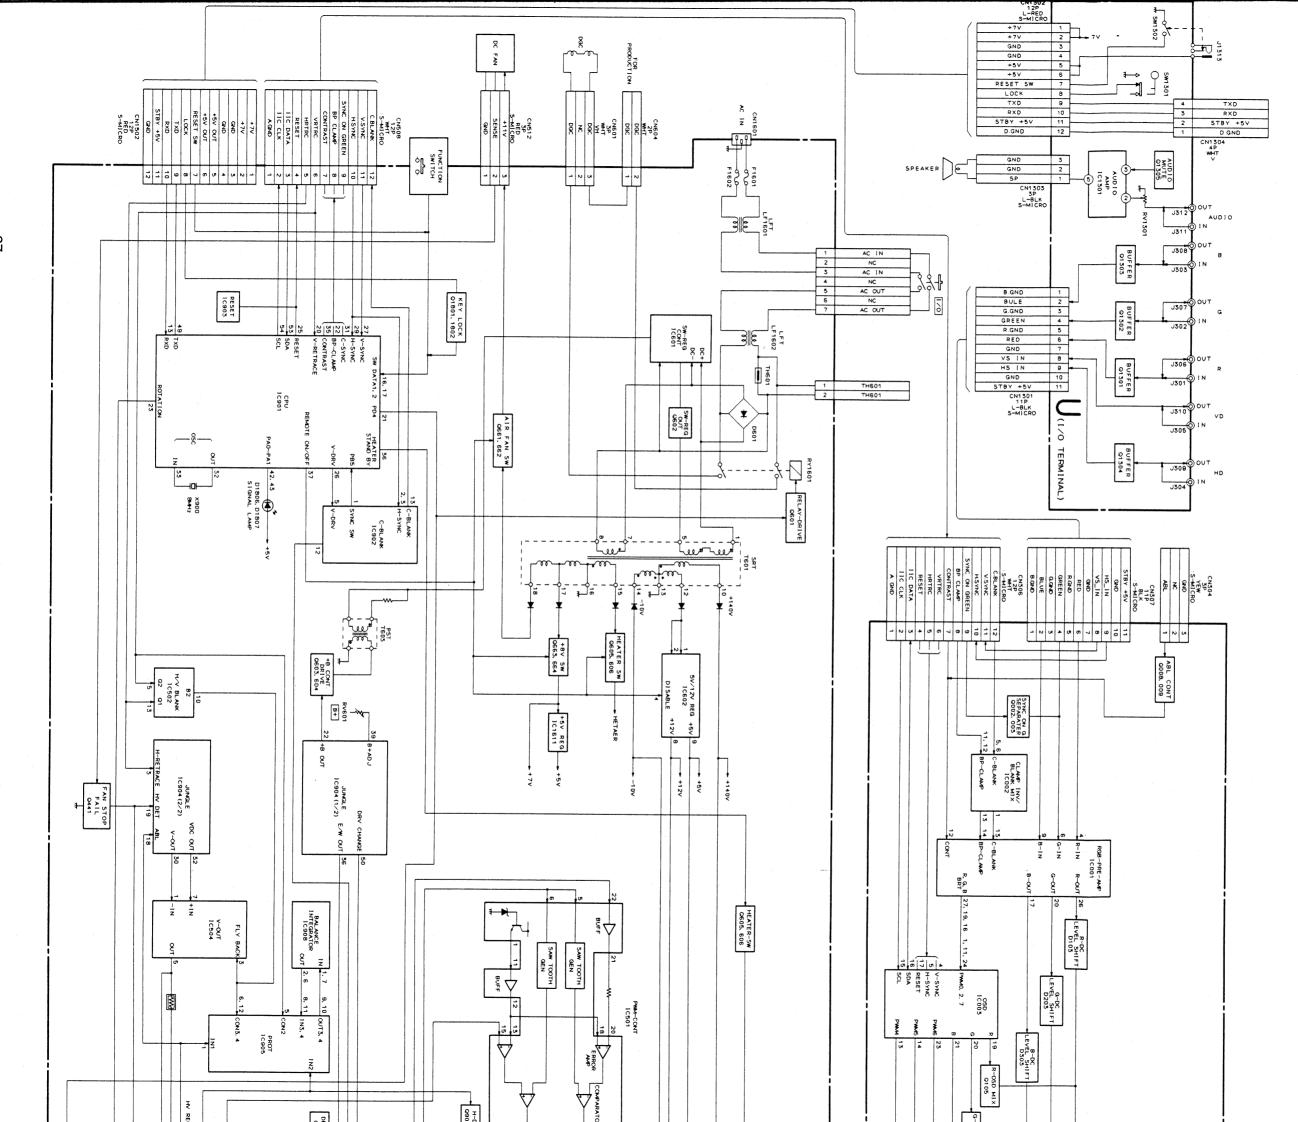

- 29 –

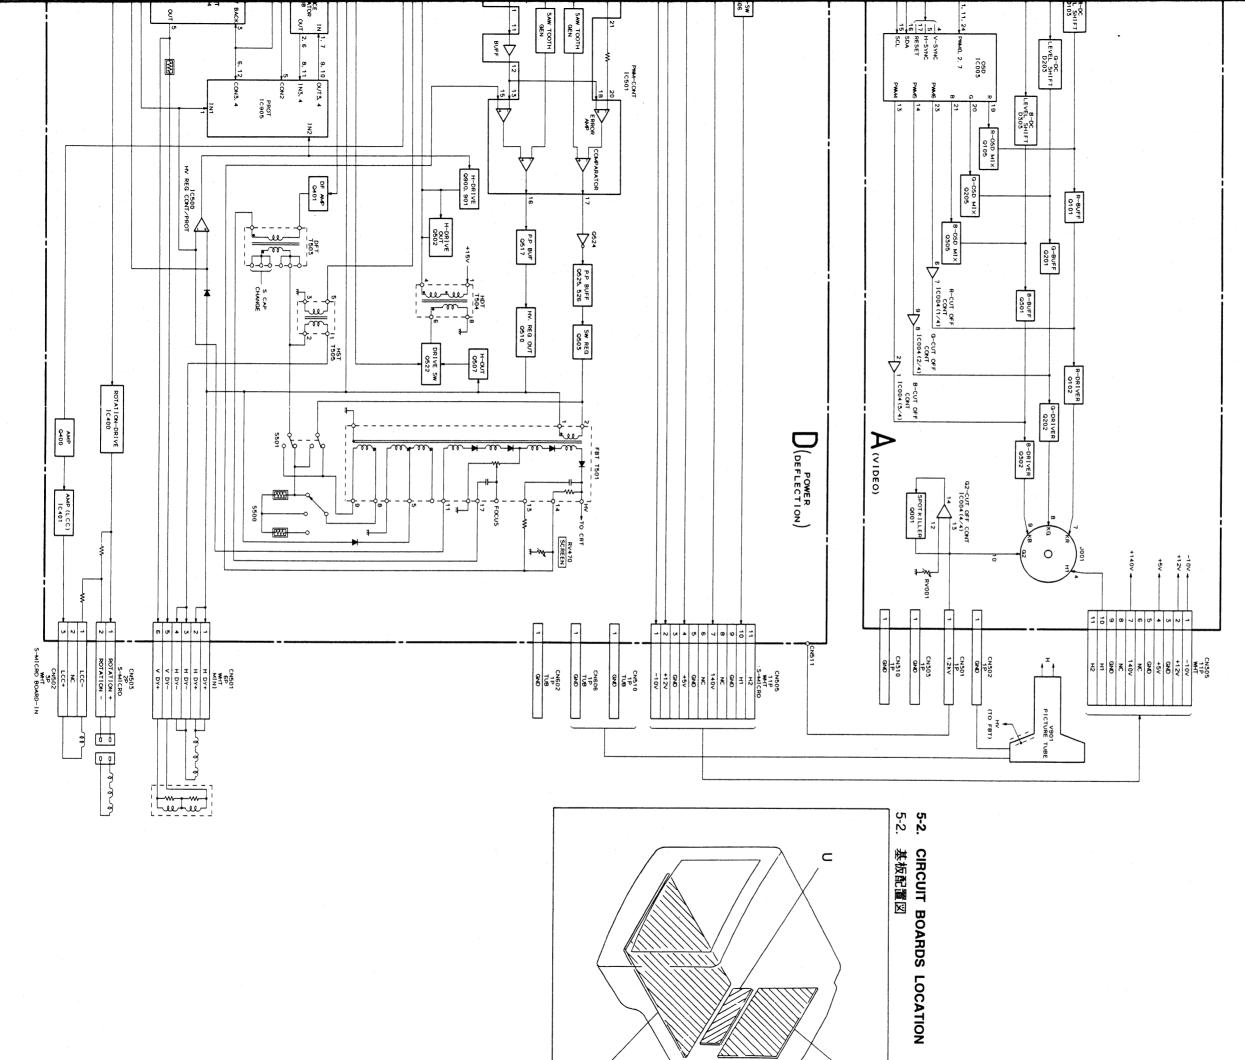

 \Box

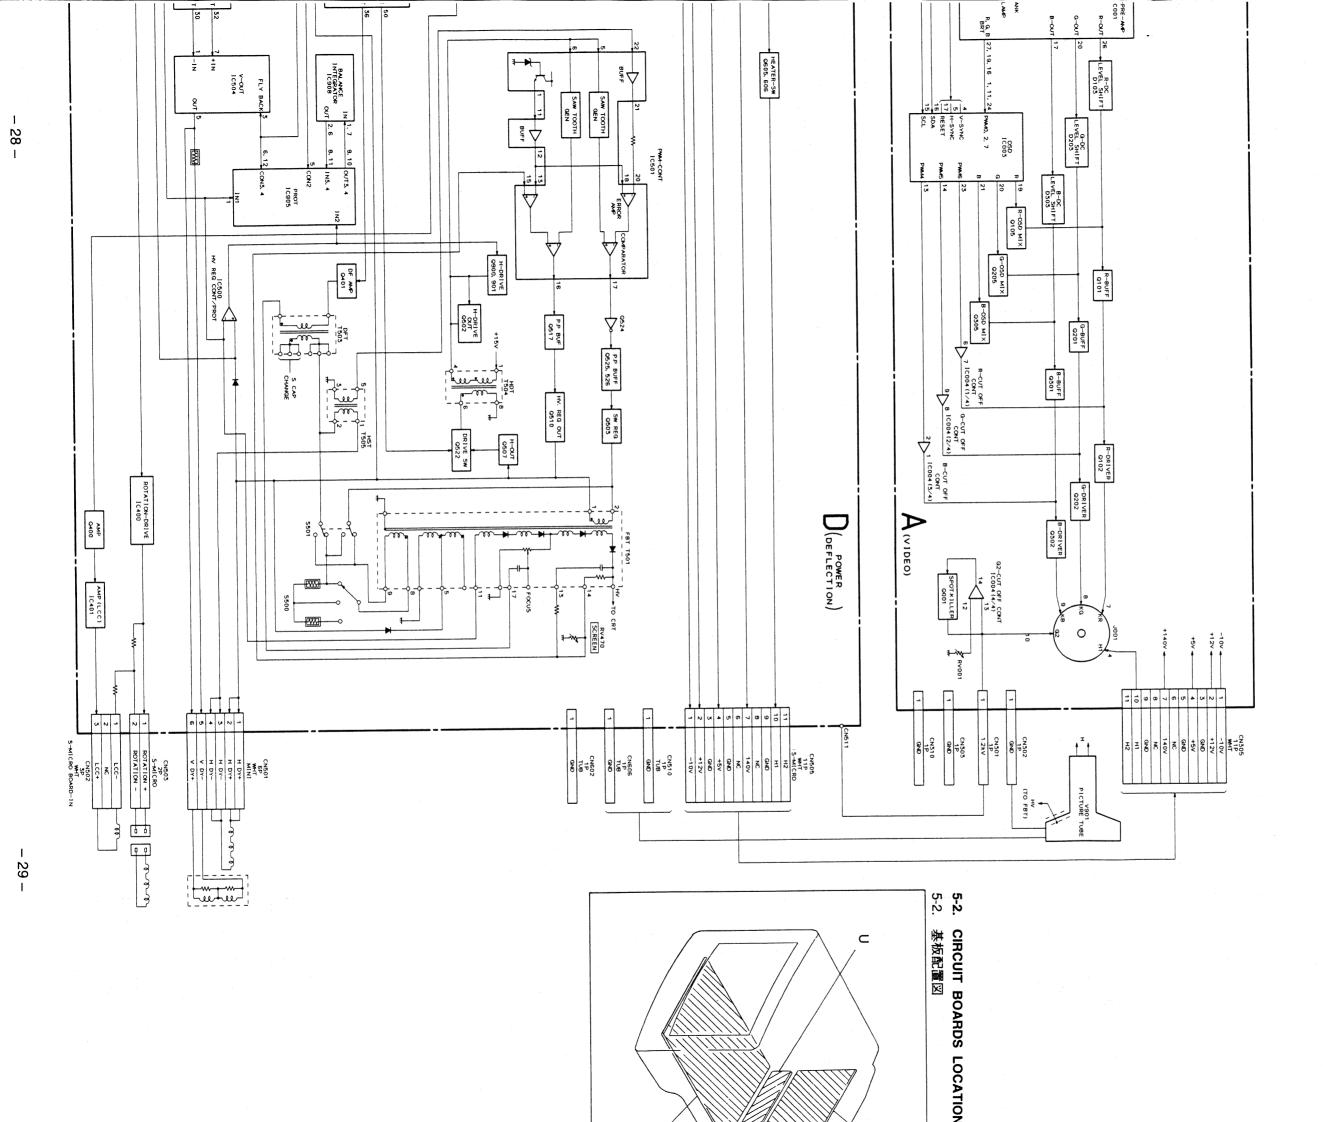

<u>ဂ</u>ုသ SCHEMATIC DIAGRAM AND PRINTED

WIRING BOARD

5-3. 回路図, プリント図

- Caution when replacing ship parts.
 New parts must be attached after removal of chip.
 Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
 All resistors are in ohms, 1/10W unless oherewise noted. kΩ: 1000Ω, MΩ: 1000kΩ.
 All capacitors are in μF unless otherwise noted. pF: μμF 50V or less are not indicated except for electrolytics and tantalums.

- tantalums.
 All variable and adjustable resistors have characteristic cuve B, unless otherwise noted.

OCATION

- two tributes inview.

 two trible resistor.

 two trible resistor.

 two trible resistor.

 two trible resistor.

 trible resistor.

 trible trible trible resistor.

 trible trible trible resistor.

 trible tri
- The components identified by B in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
 When replacing components identified by I mark the necessary adjustments indicated. If results do not meet the specified value, change the component identified by B and repeat the adjustment until the specified value is achieved.
 When replacing the part in below table, be sure to perform the related adjustment.
 (Page 14 reference)

	1		
	١		
	1		
	ı		d
	ı		1
	1		
o	1		
2	1		
+	1		
•	١		
2	1		
_	١		
2	1		
ć	ı		,
Part replaced (١		
_	1		
ï	ı		
N	1		
_	ı		
	ı		
	١		
	1		
	١		
	1		
	- 1		

RV470

SCREEN

D

Beam Current Protector Circuit	D board IC500, IC501, D596, D597, R450, R459, R460, R498, R970, C528, C549, C938 • Mounted D board	D
HV Hold-Down Circuit	D board IC500, IC501, D407, D515, R472, R491, R492, R494, R496, R577, C402, C403, C404, FBT (T501) • Mounted D board	Da
HV Regulator Circuit	D board IC501, FBT (T501), R457, R475, R487, R508, R509, R512, RV470,C509, C526, C541, C542, C580, C585	Db
	Part replaced (🖬)	

Reference information RESISTOR RN I

RESISTOR	RN	METAL FILM
	 RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	RB	NONFLAMMABLE CEMENT
	 RW	NONFLAMMABLE WIREWOUND
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	 PP	POLYPROPYLENE
	 PT	MYLAR
	: MPS	METALIZED POLYESTER
	MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	. ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The components identified by shading and mark $\underline{\mathbb{A}}$ are critical for safety. Replace only with part number specified.

:主要信号経路。 〇番号は、波形図の照合番号。


・電圧値はカラーバゼネレーターよりカラーバー信号を入力したときの対これ間の参考値(使用テスターDC10MQ)。
・使用テスターの入力インピーダンスにより電圧が多少異なります。
・ 回 印の部品の定数は、X線量規制の規格を満足させるため、製造時セ、毎に確認し決定したものです。万一この部品を交換する場合は、セッ付いている部品と同一のものをご使用ください。また、回路図上の ② 印の部品を交換した場合は、指定された調整、すが必要です。確認の結果が指示した値と合致しない場合は、日 印の部と交換し必ず指定した値と合致するように調整してください。
(15ページの確認方法参照)


スクリーン	
RV470	日 マーク部品

・マウント済口 基板 一		
C528, C549, C938		
R460, R498, R970,		回路チェック
D597, R450, R459,		プロテクター
IC500, IC501, D596,	D 基板	ビーム電流
・マウント済D基板		
C404, FBT(T501)		
R577, C402, C403,		
R492, R494, R496,		
D515, R472, R491		ダウンチェック
IC500, IC501, D407,	D基板	メイト 华AH
C585	-	
C541, C542, C580,		
RV470, C509, C526,		
R508, R509, R512,		
R457, R475, R487,		回路チェック
IC501, FBT (T501),	D操板	HVレギュレータ
□マーク部品		

7									コンデンサ	コイル								リファレンス	
	: ALR	: ALT	: ALB	: MPP	: MPS	. PT	 PP	· PS	: TA	: LF-8L	. RB	. RS	 RW	: FUSE	: FPRD	. RC	 RN	、ス情報	
	ハイリップル	高温用	バイポーツ	タライス	_	マイラ	ポンレロ	スチロール	タンタル	マイクロインダクタ	冷霧存カメソァ	不然性酿金	不然性卷線	 	不然在 カーボン	ソニッポ	金属被膜		

△および ※※※ 印の部品は、安全性を維持するために、重要な部品です。従って交換時は、必ず指定の部品を使用して下さい。

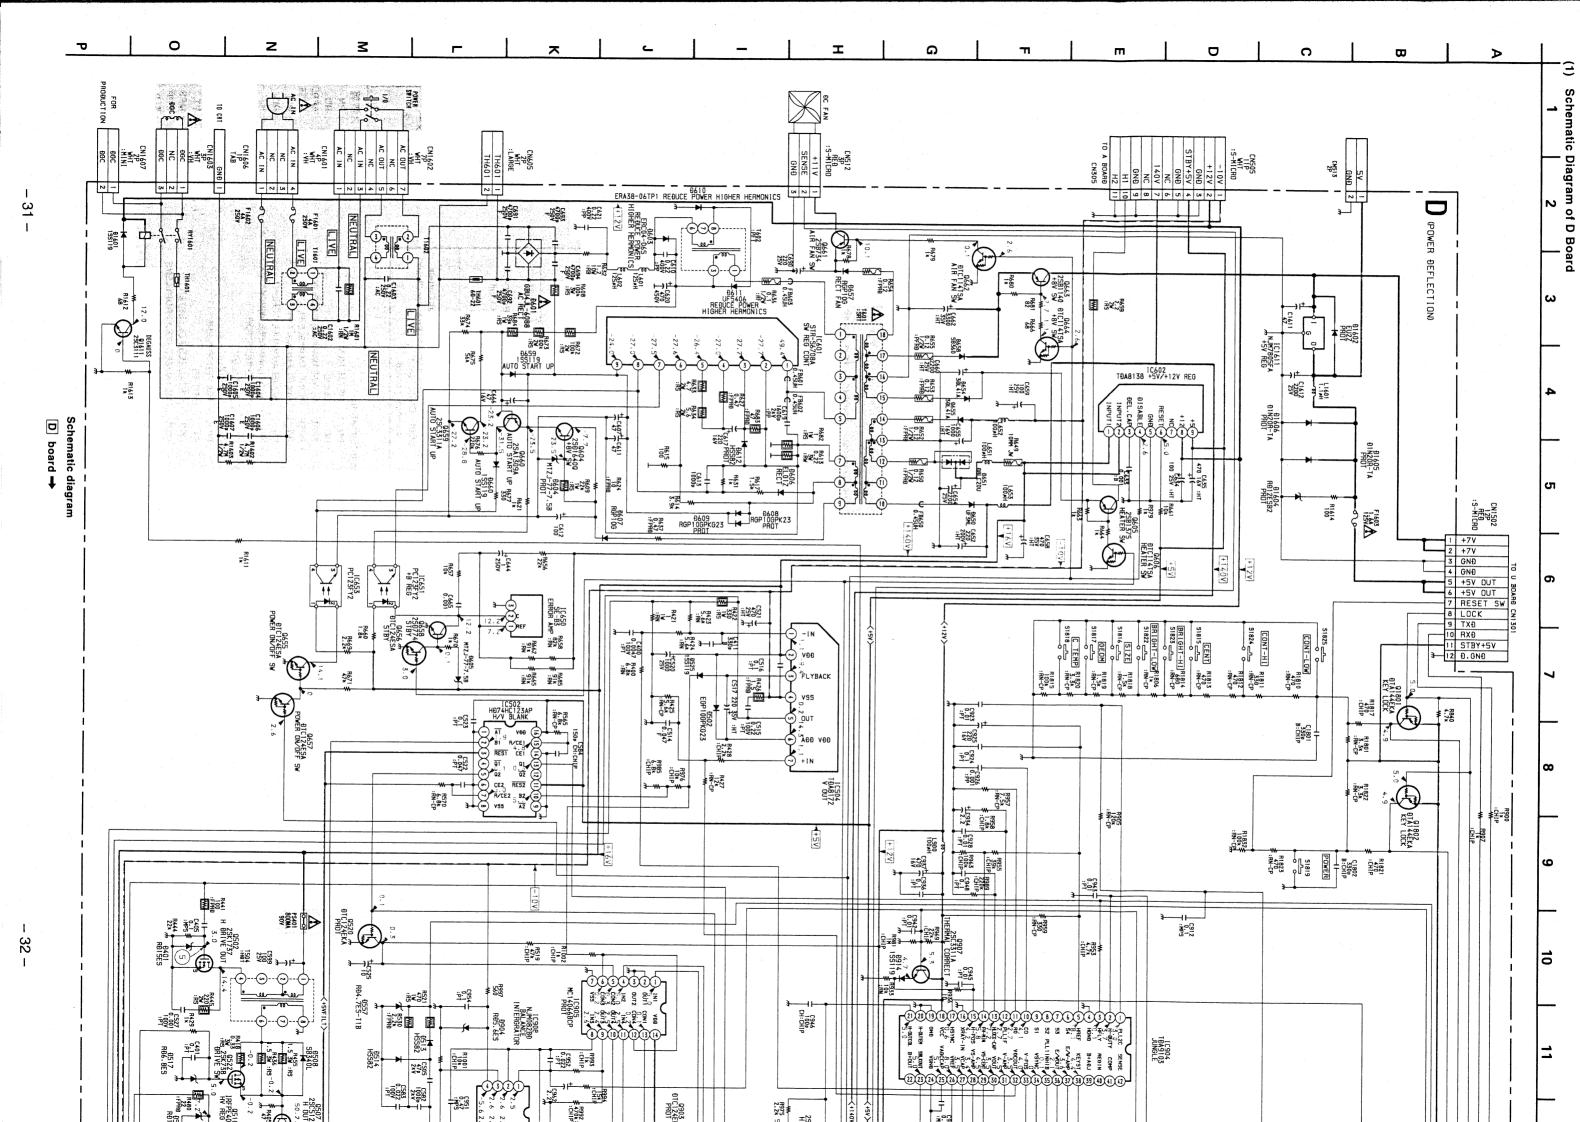

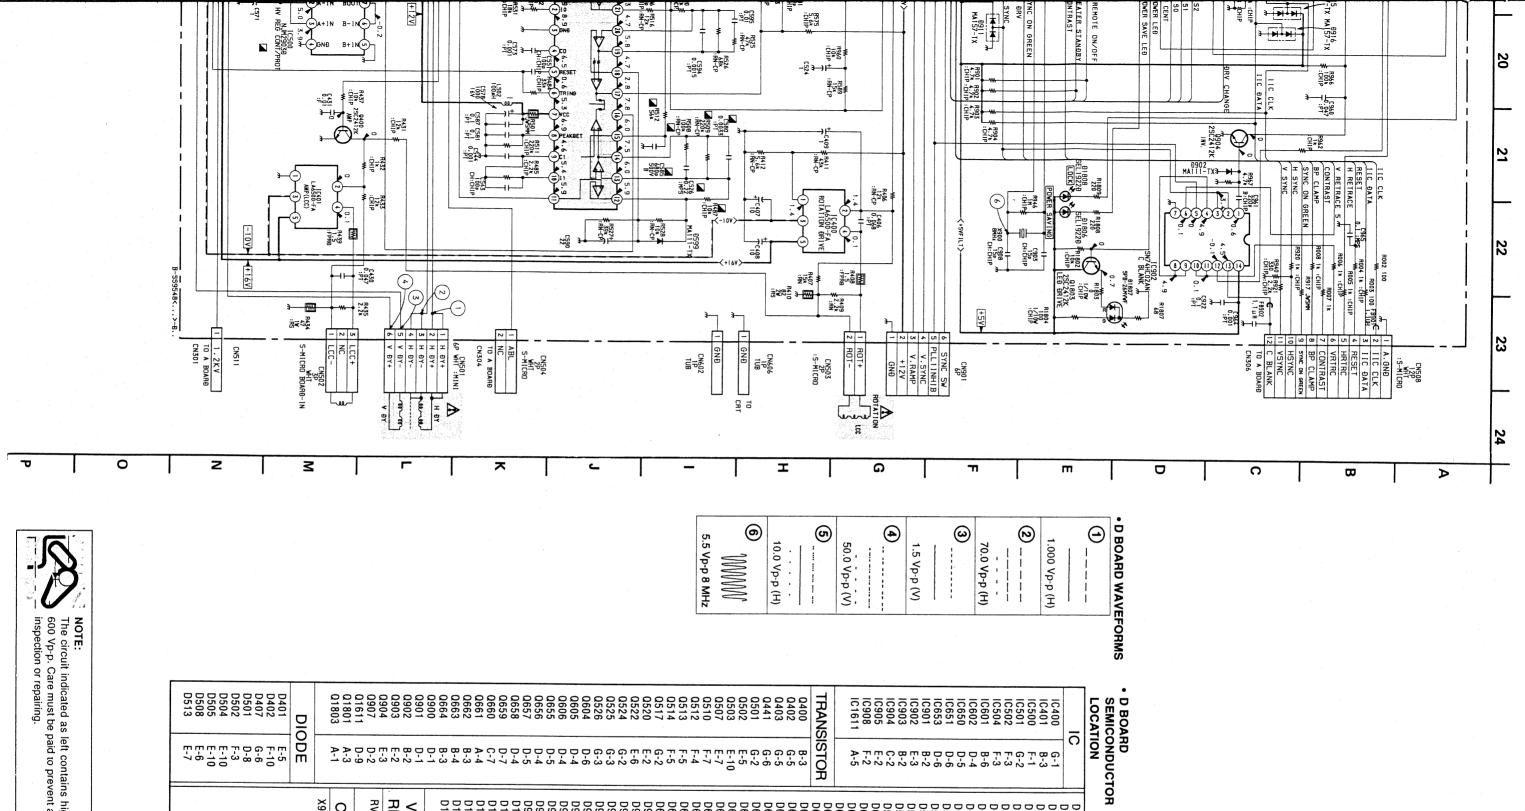

ਨ

NOTE:The circuit indicated as left contains high voltage of 600 Vp-p. Care must be paid to prevent an electric shc inspection or repairing.


DIODE

X900

CRYSTAL X900 A-1

VARIABLE RESISTOR

E-5 F-10 G-6 D-8 F-3 E-10 E-10 E-6 E-7

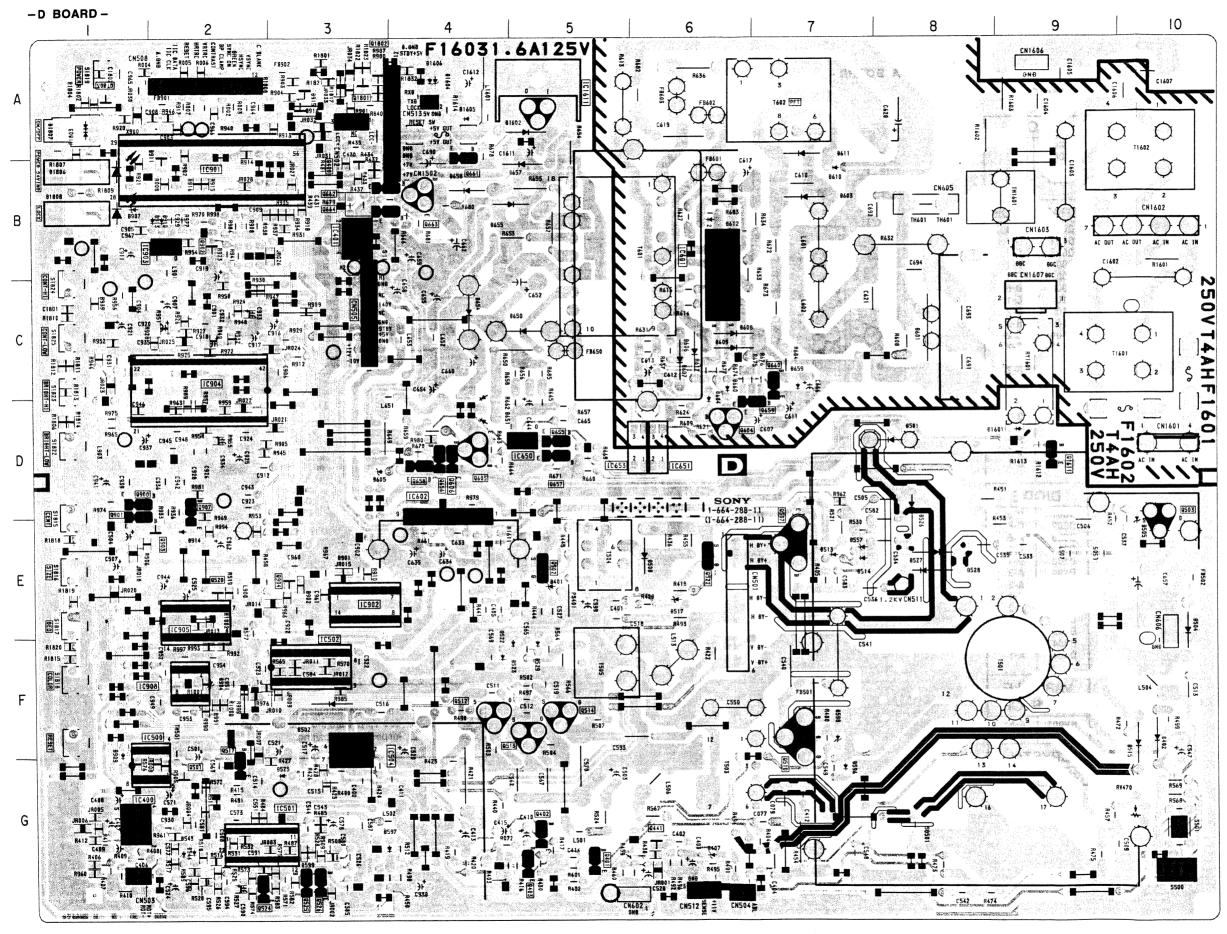




• A BOARD SEMICONDUCTOR


LOCATI	ION
10	С
IC001 IC002 IC003 IC004	C-3 A-5 B-5 B-5
TRANS	ISTOR
Q001 Q002 Q003 Q004 Q007 Q008 Q101 Q102 Q103 Q104 Q105 Q201 Q202 Q203 Q204 Q205 Q301 Q302 Q303 Q304 Q305	A-4 C-6 C-6 C-1 D-5 D-5 C-1 B-2 B-2 C-2 B-2 C-2 B-2 C-1 B-1 B-1 B-1 B-1
DIO	DE
D001 D002 D005 D014 D103 D104 D105 D203 D204 D205 D303 D304 D305	D-5 C-5 A-6 B-4 D-1 A-3 A-2 D-1 A-2 B-2 D-1 A-1
VARI/ RESIS	ABLE STOR
RV001	A-5
CRYS	STAL
X001	C-5


- A BOARD -

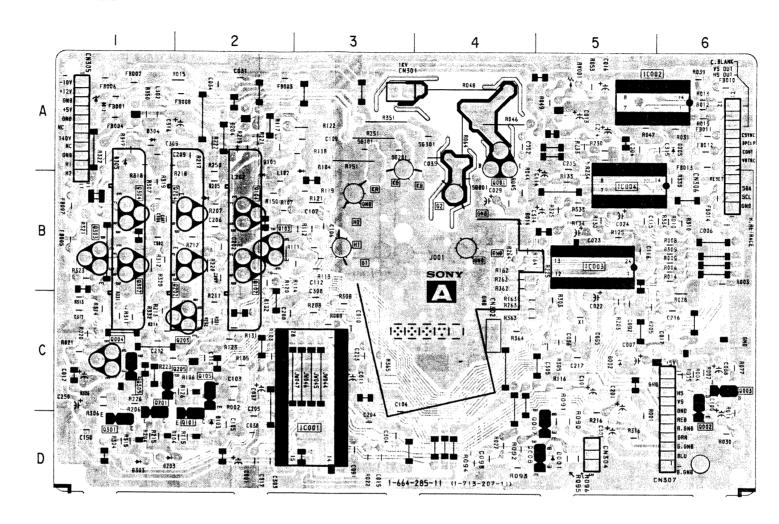




NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

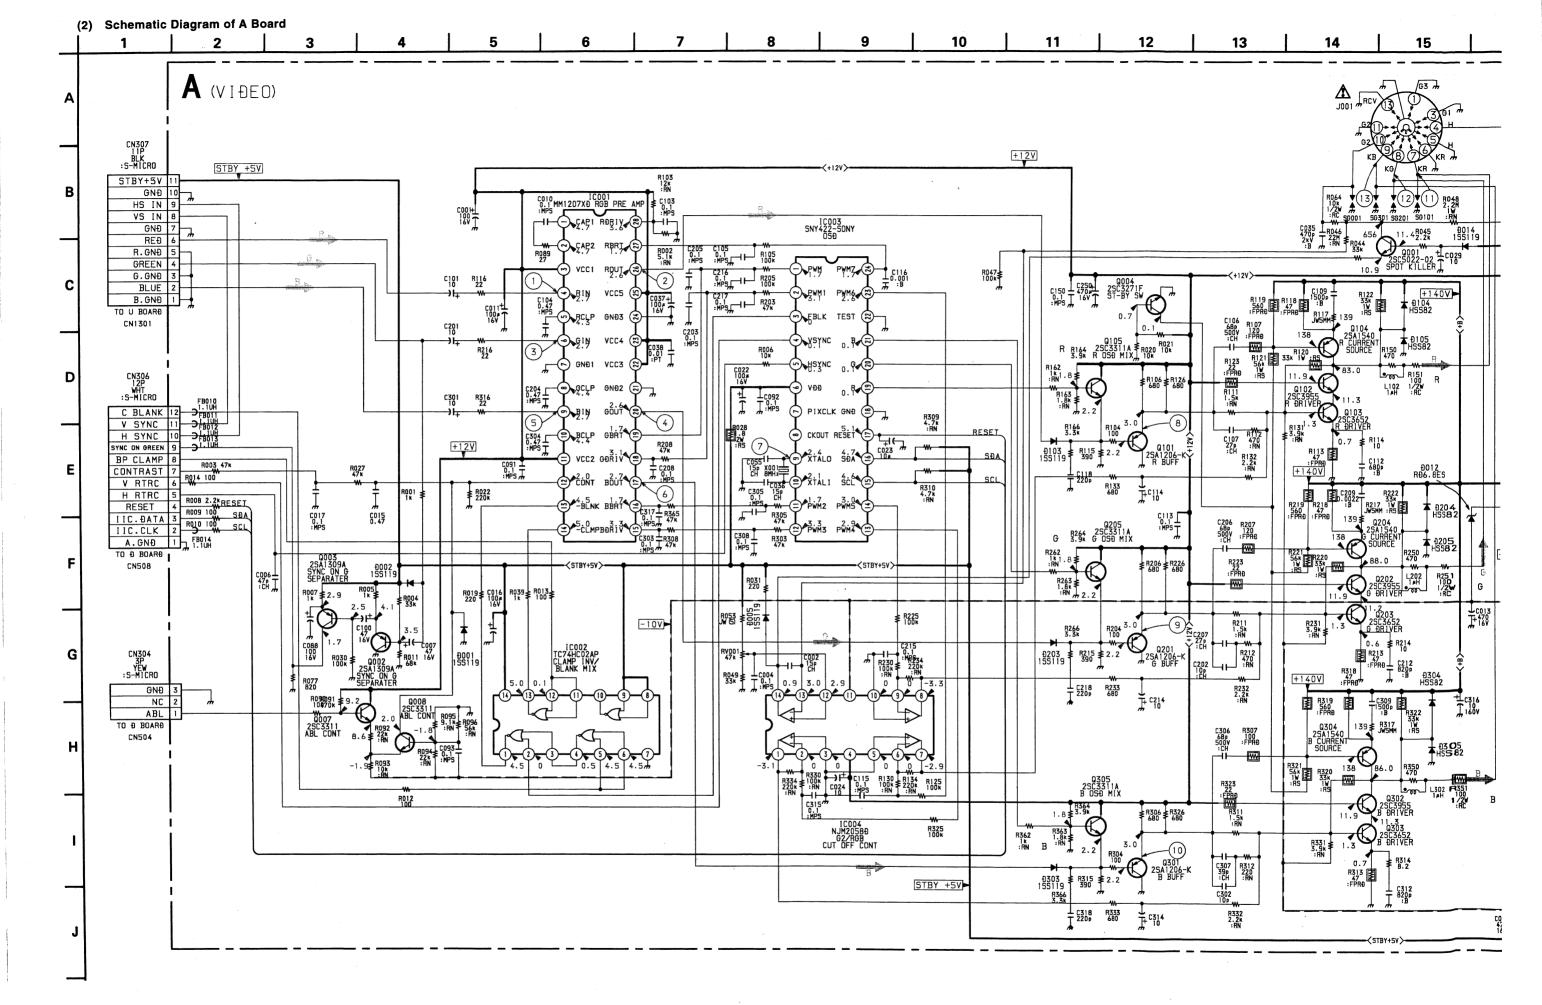

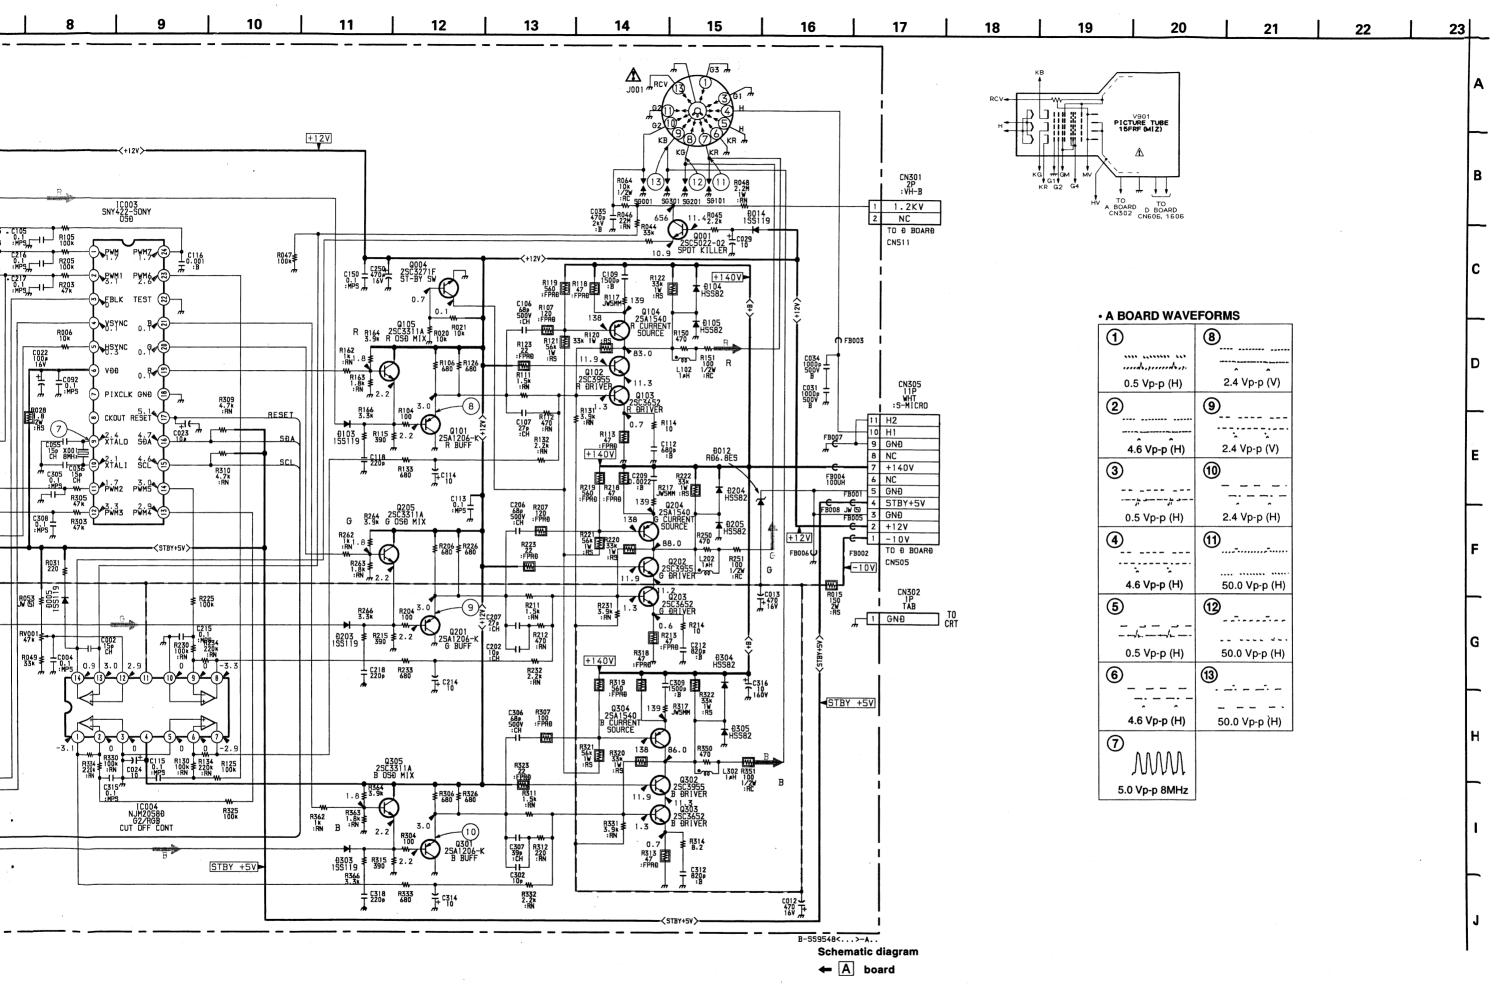





- U BOARD -

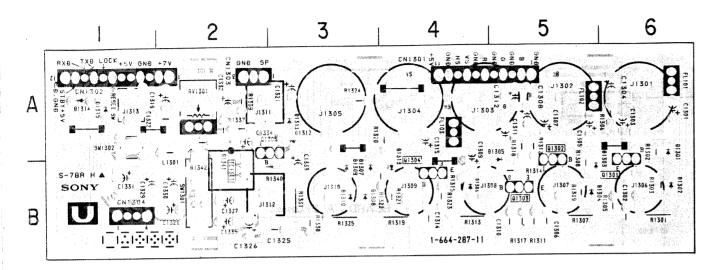

• U BOARD SEMICONDUCTOR LOCATION

LOCATION	ON	
IC	;	
IC1301	B-2	
TRANS	ISTOR	
Q1301 Q1302 Q1303 Q1304 Q1305	B-6 A-5 B-5 B-4 A-2	
DIO	DE	
D1301 D1302 D1303 D1304 D1306 D1307 D1308 D1309 D1310 D1311 D1312 D1313 D1314 D1315	A-6 B-6 B-4 B-5 B-3 B-3 B-3 B-3 B-3 A-3 A-1	

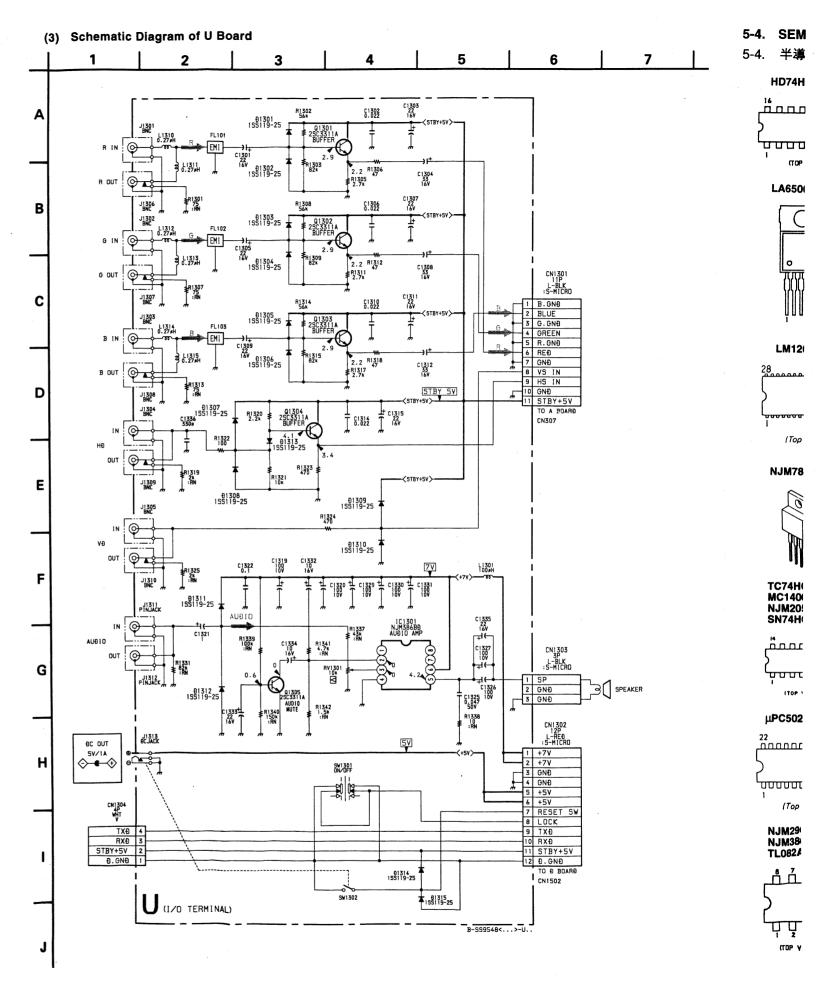

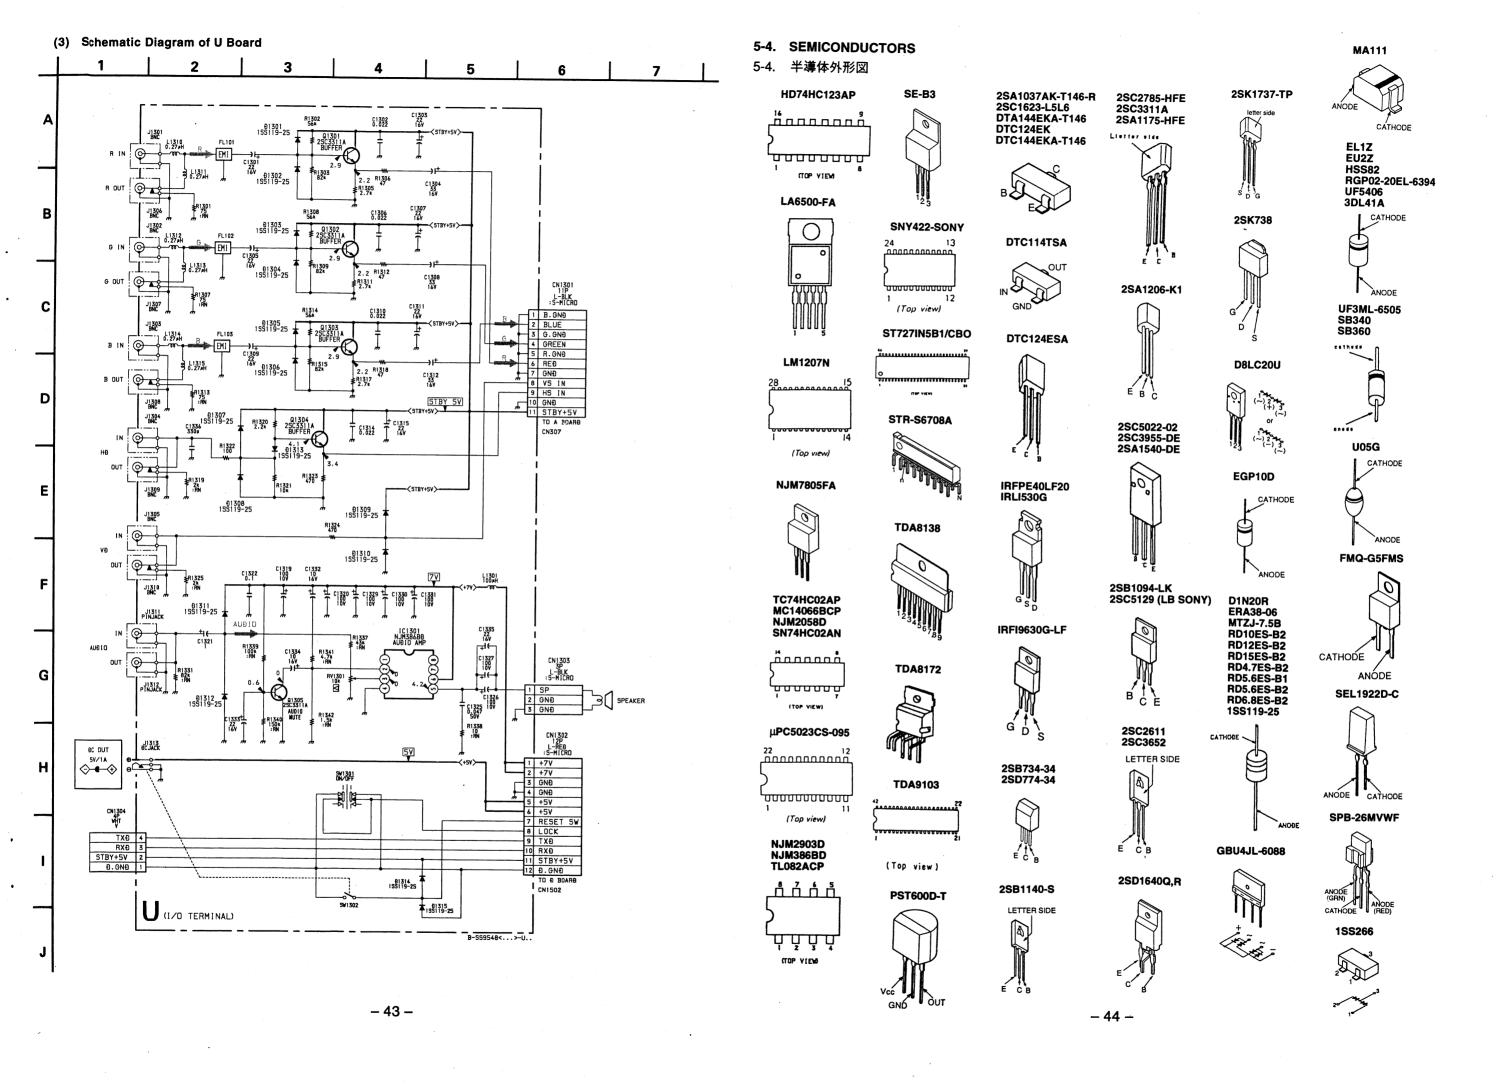

SECTION 6. EXPLODED VIEW

6. 分解図

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- in the remark column.

 Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ∆ are critical for safety. Replace only with part number specified.

Les composants identifiés per un tramé et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

【使用上の注意】

- 組立部品の構成部品は備考欄に図面番号で示します。
- ◆ * 印の部品は常備在庫しておりません。受注して供給できるまで、日数を要します。
- 分解図中の機構部品で、図面番号のない部品は供給しません。

△および 印の部品は、安全性を維持 するために、重要な部品です。従って交換 時は、必ず指定の部品を使用して下さい。 ▲および 即の部品は、安全性を維持 するために、重要な部品です。従って交換 時は、必ず指定の部品を使用して下さい。


The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés per un tramé et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

6-1. CHASSIS (1)

6-1. シャーシ部(1)

○: 7-682-548-09
 ○: 7-685-154-19
 ○: 7-685-648-79
 ○: 7-685-663-71
 SCREW +P 3 × 8
 SCREW +P 3 × 35
 SCREW +BVTP 3 × 12
 SCREW +BVTP 4 × 16

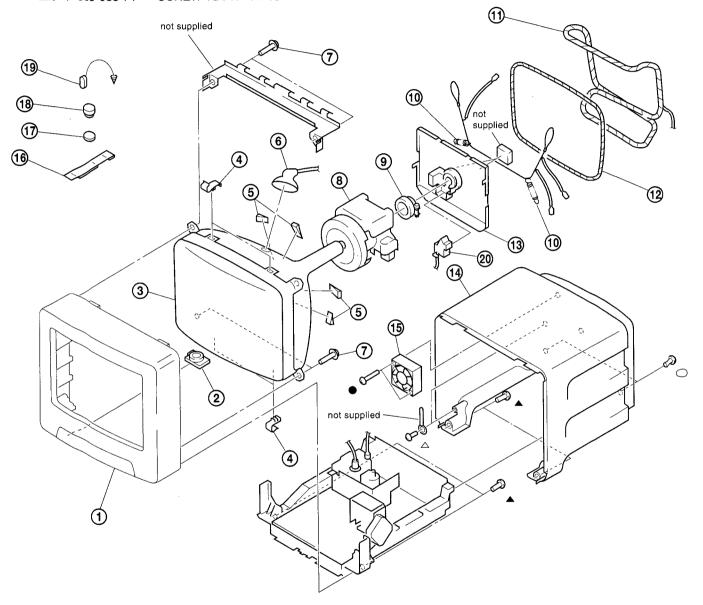

Ref.No.	. Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
1 2 3 3 4	1-505-569-11 △8-734-832-05 △8-734-832-00	BEZEL ASSY SPEAKER (2.85X4CM) PICTURE TUBE 15FRF(MIZ) (U PICTURE TUBE 15FRF(MIZ) (J HOLDER, DEGAUSSING COIL)		▲ 1-416-290-11 * A-1293-517-A	COIL, DEMAGNETIZATION COIL, LANDING CORRECTION A BOARD, COMPLETE COVER, REAR FAN, DC	N (LCC)
5 6 7 8	∆ 1-540-005-21 4-365-808-01 ∆ 8-451-469-21	SPACER, DY CAP ASSY, HIGH VOLTAGE SCREW (5), TAPPING DEFLECTION YOKE Y15FRF2 NECK ASSY (NA293)		16 17 18 19 20	1-452-032-00 1-452-094-00 4-308-870-00	PERMALLOY ASSY, CONVER MAGNET, DISC 10 mm ø MAGNET, ROTATABLE DISK CLIP, LEAD WIRE SOCKET, CRT	
10	4-369-318-00	SPRING, TENSION					

△および 印の部品は、安全性を維持 するために、重要な部品です。従って交換 時は、必ず指定の部品を使用して下さい。 The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés per un tramé et une marque extstyle e


6-2. CHASSIS (2)

6-2. シャーシ部(2)

 ★: 7-685-871-09
 SCREW +BVTT 3 × 6
 □: 7-685-876-09
 SCREW +BVTT 3 × 16

 △: 7-685-648-79
 SCREW +BVTP 3 × 12
 ■: 7-685-880-09
 SCREW +BVTT 4 × 6

 A: 7-685-663-71
 SCREW +BVTP 4 × 16
 ☆: 7-682-961-01
 SCREW +PSW 4 × 8

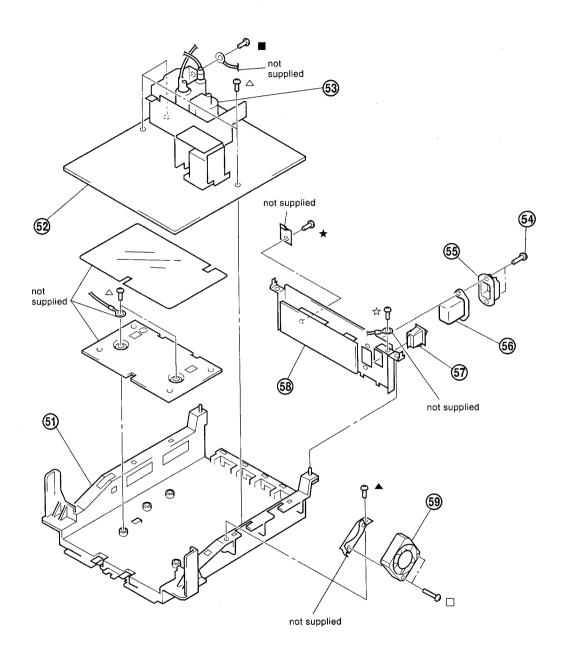

Ref.No	. Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark≤
51 52	4-058-381-01 * A-1346-569-4 Δ X-4033-083-2 3-178-213-21	COVER, BOTTOM A D BOARD, COMPLETE TRANSFORMER ASSY, FL SCREW +P 3X10 HOLDER (A), PLUG	YBACK		▲ 1-762-300-11 1-694-253-11	INLET, AC (3P) SWITCH, AC POWER SEESAV U BOARD MOTER, DC FAN	v .


△および □ 印の部品は、安全性を維持 するために、重要な部品です。従って交換 時は、必ず指定の部品を使用して下さい。

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés per un tramé et une marque riangle sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

6-3. PACKING MATERIALS

6-3. 梱包部

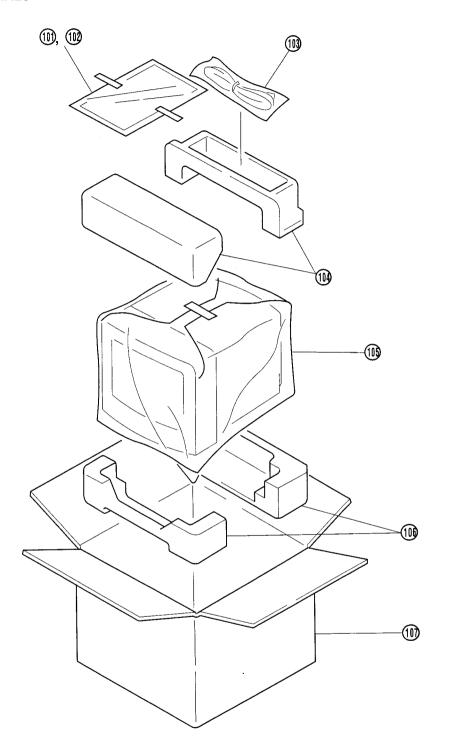

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
103	3-859-906-01 \(\) 1-534-754-00 \(\) 1-551-631-22	HOLDER (B), PLUG MANUAL, INSTRUCTION (JAPANESE, ENGLISH, FRENCI GERMAN, SPANISH, CORD, POWER 7 A/120 V (J) CORD, POWER 6A/250V (AEP) CORD, POWER 13 A/125 V (U/C	ÍTALIAN)	105 106	* 4-041-927-11 * 4-057-662-01	CUSHION (UPPER) (ASSY) BAG, POLYETHYLENE CUSHION (LOWER) (ASSY) INDIVIDUAL CARTON	

SECTION 7. ELECTRICAL PARTS LIST



7. 電気部品表

NOTE:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés per un tramé et une marque A sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

The components identified by ■ in this RESISTORS manual have been carefully factory- • All resistors are in ohms selected for each set in order to satisfy • F: nonflammable regulations regarding X-ray radiation. • Items marked " * " are not stocked since Should replacement be required, replace only with the value originally used.

 All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

- they are seldom required for routine service. Some delay should be anticipated when ordering these items.

【使用上の注意】

△および 印の部品は、安全性を維持 するために、重要な部品です。従って交換 時は、必ず指定の部品を使用して下さい。

図面番号で部品を指定するときは基板名又 はブロックを併せて指定して下さい。

● ■印の部品の定数は、X線量規制の規格を満足させるため、製造 時セット毎に確認し決定したものです。 万一この部品を交換する場合は、セットに付いている部品と同一 のものをご使用下さい。

抵抗の単位Ωは省略してあります。

金属被膜:金属被膜抵抗。

酸金被膜:酸化金属被膜抵抗。

備考欄のFは不燃性抵抗を示します。

- * 印の部品は常時在庫しておりません。
- -XX、-X は標準化部品のため、セットに付いている部品と異なる 場合があります。
- ここに記載されている部品は,補修用部品であるため,回路図及 びセットについている部品と異なる場合があります。

REF.NO.	PART NO.	DESCRIPTION		RE	MARK	REF.NO	. PART NO.	DESCRIPTION	l	RI	EMARK_
*	A-1293-517-A	A BOARD, COM				C036	1-102-951-00	CERAMIC	15PF	5%	50V
*	V 4022 626.1	COVER ASSY, \	/IDEO			C037 C038	1-126-933-11 1-137-370-11		100MF 0.01MF	20% 5%	16V 50V
		COVER, VIDEO				C055	1-102-951-00	CERAMIC	15PF	5%	50V
		SCREW (M3X10		١		C088	1-126-933-11	ELECT	100MF	20%	16V
	4-002-004-11	SOUTH (MOXIC	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	,		C091	1-136-165-00	FILM	0.1MF	5%	50V
	<capacito< td=""><td>R></td><td></td><td></td><td></td><td>C092</td><td>1-136-165-00</td><td>FILM</td><td>0.1MF</td><td>5%</td><td>50V</td></capacito<>	R>				C092	1-136-165-00	FILM	0.1MF	5%	50V
						C093	1-136-165-00	FILM	0.1MF	5%	50V
C0O1	1-126-933-11	ELECT	100MF	20%	16V	C100	1-126-967-11		47MF	20%	16V
C0 O2	1-102-951-00	CERAMIC	15PF	5%	50V	C101	1-126-964-11		10MF	20%	50V
C0 O 4	1-136-165-00	FILM	0.1MF	5%	50V	C103	1-136-165-00	FILM	0.1MF	5%	50V
C0O6	1-102-852-91	CERAMIC	47PF	5%	50V						50V
C0 O 7	1-126-967-11	ELECT	47MF	20%	16V	C104	1-136-173-00		0.47MF	5%	501
						C105	1-136-165-00		0.1MF	5%	501
C010	1-136-165-00	•	0.1MF	5%	50V	C106	1-107-608-11		68PF	5%	500/ 50\
C0 1 1	1-126-933-1	1 ELECT	100MF	20%	16V	C107	1-102-516-11		27PF	5%	50V 50V
C012	1-126-935-1		470MF	20%		C109	1-102-119-00	CERAMIC	0.0015MF	10%	501
C013	1-126-935-1		470MF	20%	16V		4 400 440 00	0554440	0000	10%	50 ¥
C015	1-136-173-0	0 FILM	0.47MF	5%	50V	C112	1-102-116-00		680PF	10% 5%	50¥
						C113	1-136-165-00		0.1MF 10MF	5% 20%	50∜ 50∜
C016	1-126-933-1		100MF	20%		C114	1-126-964-11		0.1MF	20 % 5%	50∜ 5 0 ∜
C017	1-136-165-0		0.1MF	5%	50V	C115	1-136-165-00		0.1MF	10%	
C022	1-126-933-1		100MF	20%		C116	1-102-074-00	CERAIVIIC	U.UUTIVIE	10 /6	30)
C023	1-126-964-1		10MF	20%		0440	1-102-110-0	O CERANIC	220PF	10%	50/
C024	1-126-964-1	1 ELECT	10MF	20%	50V	C118	1-102-110-0		0.1MF	5%	50/
			405.45	000/	T0\/	C150 C201	1-136-165-0		10MF	20%	
CO29	1-126-964-1		10MF		50V		1-102-508-9		10PF	0.5P	
C031		1 CERAMIC	0.001MF		500V	C202 C203	1-102-508-9	•	0.1MF	5%	50/
CO34		1 CERAMIC	0.001MF		500V 2KV	0203	1-130-105-0	UIILIVI	O. HVII	3/0	301
C 0:3 5	1-162-134-1	1 CERAMIC	470PF	10%	∠r∖v	1					



△および 印の部品は、安全性を維持 するために、重要な部品です。従って交換 時は、必ず指定の部品を使用して下さい。 Les composants identifiés per un tramé et une marque \(\frac{\Lambda}{2} \) sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

The components identified by shading and mark $ext{$\triangle$}$ are critical for safety. Replace only with part number specified.

Anthony hillogy of your gas y capable and analysis of a supplied to a fine of the control of the

REF.NO.	PART NO.	DESCRIPTION	l	RI	EMARK	REF.NO	PART NO.	DESCRIPTION		RE	MARK_
C205 C206 C207	1-136-173-00 1-136-165-00 1-107-608-11 1-102-516-11 1-136-165-00	FILM CERAMIC CERAMIC	0.47MF 0.1MF 68PF 27PF 0.1MF	5% 5% 5% 5% 5%	50V 50V 500V 50V 50V	FB003 FB004	1-412-911-11 1-412-537-31	INDUCTOR, FER INDUCTOR, FER INDUCTOR 1000 INDUCTOR, FER	RRITE BEAD UH)	
C209 C212 C214 C215	1-102-121-00 1-102-117-00 1-126-964-11 1-136-165-00 1-136-165-00	CERAMIC CERAMIC ELECT FILM	0.0022MF 820PF 10MF 0.1MF	10% 10% 20% 5% 5%	50V	FB007 FB010 FB011	1-412-911-11 1-410-397-21 1-410-397-21	INDUCTOR, FEF INDUCTOR, FEF FERRITE BEAD FERRITE BEAD FERRITE BEAD	RRITE BEAD INDUCTOR INDUCTOR) 1.1UH 1.1UH	
C217 C218	1-136-165-00 1-126-964-11 1-102-508-91	FILM ELECT	0.1MF 10MF 10PF	5% 20% 0.5PF	50V 50V			FERRITE BEAD FERRITE BEAD			
C304 C305 C306	1-136-165-00 1-136-173-00 1-136-165-00 1-107-608-11 1-102-965-00	FILM FILM CERAMIC	0.1MF 0.47MF 0.1MF 68PF 39PF	5% 5% 5% 5% 5%	50V 50V 50V 500V 50V	IC002 IC003	8-759-335-25 8-759-232-03 8-759-348-09	IC LM1207N IC TC74HC02AF IC SNY422-SON IC NJM2058D			
C309 C312 C314	1-136-165-00 1-102-119-00 1-102-117-00 1-126-964-11 1-136-165-00	CERAMIC CERAMIC ELECT	0.1MF 0.0015MF 820PF 10MF 0.1MF	5% 10% 10% 20% 5%	50V	J001 ₫	<jack> \1-251-335-11</jack>	SÖCKET, ÖRT			
C317	1-107-943-11 1-136-165-00 1-102-110-00	FILM	10MF 0.1MF 220PF	5%	160V 50V 50V	L202	1-414-142-11	INDUCTOR 1UH INDUCTOR 1UH INDUCTOR 1UH	1		
	<connecto< td=""><td>OR> PIN, CONNECT</td><td>OR (PC RC</td><td>ARD)</td><td>2P</td><td></td><td><transisto< td=""><td>)B^</td><td></td><td></td><td></td></transisto<></td></connecto<>	OR> PIN, CONNECT	OR (PC RC	ARD)	2 P		<transisto< td=""><td>)B^</td><td></td><td></td><td></td></transisto<>)B^			
CN302 CN304* CN305* CN306*	1-695-915-11 1-564-506-11 1-564-514-11 1-564-515-11	TAB (CONTAC' PLUG, CONNE PLUG, CONNE PLUG, CONNE	T) CTOR 3P CTOR 11P CTOR 12P	, (10)		Q002 Q003 Q004	8-729-032-61 8-729-119-76 8-729-119-76 8-729-326-11	TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2	SA1175-HFI SA1175-HFI SC2611	≣	
	<diode></diode>							TRANSISTOR 2 TRANSISTOR 2		E	
D002 D005	8-719-911-19 8-719-911-19 8-719-911-19	DIODE 188119 DIODE 188119 DIODE 188119	9-25 9-25			Q102 Q103 Q104	8-729-019-70 8-729-031-84 8-729-823-07) TRANSISTOR 2 I TRANSISTOR 2 7 TRANSISTOR 2	SC3955-DE SC3652 SA1540-DE		
D012 D014 D103 D104	8-719-911-19 8-719-911-19 8-719-970-8	7 DIODÉ RD6.8E 9 DIODE 1SS119 9 DIODE 1SS119 3 DIODE HSS82	9-25 9-25			Q201 Q202 Q203	8-729-103-19 8-729-019-70 8-729-031-84	3 TRANSISTOR 2 9 TRANSISTOR 2 0 TRANSISTOR 2 4 TRANSISTOR 2 7 TRANSISTOR 2	2SA1206-K1 2SC3955-DE 2SC3652		
D105 D203 D204	8-719-911-1	3 DIODE HSS82 9 DIODE 1SS119 3 DIODE HSS82	9-25			Q301	8-729-103-19	TRANSISTOR 2	2SA1206-K1		
D205 D303 D304 D305	8-719-911-1 8-719-970-8	3 DIODE HSS82 9 DIODE 1SS119 3 DIODE HSS82 3 DIODE HSS82	9-25			Q303 Q304	8-729-031-84 8-729-823-0	O TRANSISTOR 2 4 TRANSISTOR 2 7 TRANSISTOR 2 B TRANSISTOR 2	2SC3652 2SA1540-DE		
	<ferrite< td=""><td>BEAD></td><td></td><td></td><td></td><td></td><td><resistor< td=""><td>!></td><td></td><td></td><td></td></resistor<></td></ferrite<>	BEAD>					<resistor< td=""><td>!></td><td></td><td></td><td></td></resistor<>	!>			
FB00 7	1-412-911-1	1 INDUCTOR, F	ERRITE BE	AD		R001	1-249-417-1	1 CARBON	1K	5%	1/4W



REF.NO. PA	ART NO.	DESCRIPTION	İ	RE	MARK		REF.NO.	. PART NO.	DESCRIPTION		RE	MARK	<u> </u>
							D.105	10404444	CARRON	100K	5%	1/4W	
R002 1-2	15-438-00	METAL	5.1K	1%	1/4W		R125	1-249-441-11			5%	1/4W	
R003 1-2	49-437-11	CARBON	47K	5%	1/4W	- 1	R126	1-249-415-11	•	680		1/4W	
R004 1-2	49-435-11	CARBON	33K	5%	1/4W		R130	1-215-469-00	METAL	100K	1%	1/4/0	
R005 1-2	49-417-11	CARBON	1K	5%	1/4W					0.014	4.0/	4 /4141	
							R131	1-215-435-00		3.9K	1%	1/4W	
R006 1-2	49-429-11	CARBON	10K	5%	1/4W	1	R132	1-215-429-00		2.2K	1%	1/4W	
R007 1-2	49-417-11	CARBON	1K	5%	1/4W		R133	1-249-415-11		680	5%	1/4W	
R008 1-2	249-421-11	CARBON	2.2K	5%	1/4W	i	R134	1-215-477-00		220K	1%	1/4W	
R009 1-2	247-807-31	CARBON	100	5%	1/4W		R150	1-249-413-11	CARBON	470	5%	1/4W	
R010 1-2	247-807-31	CARBON	100	5%	1/4W	-					000/	4 (0) 44	
							R151	1-202-549-00		100		1/2W	
R011 1-2	249-439-11	CARBON	68K	5%	1/4W		R162	1-215-421-00	METAL	1K	1%	1/4W	
	247-807-31		100	5%	1/4W	1	R163	1-215-427-00		1.8K	1%	1/4W	
	247-807-31	CARBON	100	5%	1/4W	ĺ	R164	1-249-424-11	CARBON	3.9K	5%	1/4W	
	247-807-31	CARBON	100	5%	1/4W		R166	1-247-843-11	CARBON	3.3K	5%	1/4W	
	215-887-00	METAL OXIDE	150	5%	2W	F [
							R203	1-249-437-11	CARBON	47K	5%	1/4W	
R019 1-2	247-815-91	CARBON	220	5%	1/4W	- 1	R204	1-247-807-31		100	5%	1/4W	
	249-429-11		10K	5%	1/4W		R205	1-249-441-11	CARBON	100K	5%	1/4W	
	249-429-11		10K	5%	1/4W	- 1	R206	1-249-415-11	CARBON	680	5%	1/4W	
	247-887 - 00	,	220K	5%	1/4W	ĺ	R207	1-249-406-11	CARBON	120	5%	1/4W	F
	249 - 437-11		47K	5%	1/4W	- 1							
11027 17	249-407-11	CALIBOIN	-7713	0,0		İ	R208	1-249-437-11	CARBON	47K	5%	1/4W	
R028 1-	016 070 11	METAL OXIDE	1.8	5%	2W	F	R211	1-215-425-00		1.5K	1%	1/4W	
	249 - 441-11		100K	5%	1/4W	.	R212	1-215-413-00		470	1%	1/4W	
			220	5%	1/4W	-	R213	1-249-401-11		47	5%	1/4W	F
	247-815-91		1K	5%	1/4W		R214	1-249-393-11		10	5%	1/4W	
	249-417-11			5% 5%	1/4W		11217	1 240 000 11	O, III DOIN				
R044 1-	249-435-11	CARBON	33K	3/0	1/400		R215	1-249-412-11	CARBON	390	5%	1/4W	
D045 .		CARRON	0.014	5%	1/4W		R216	1-247-791-91		22	5%	1/4W	
	249-421-11		2.2K	10%	1/4VV 1/4W	l	R218	1-249-401-11		47	5%	1/4W	F
	219-621-91		22M		1/4VV 1/4W	- 1	R219	1-249-414-11		560	5%	1/4W	
		CARBON	100K	5%	1/4VV 1W		R220	1-219-795-11		33K	1%	1W	F
	·211-885-2		2.2M	5%		- 1	HZZU	1-219-795-11	METAL	3310	. /0		•
R04 9 1-	-249-435-1	CARBON	33K	5%	1/4W		R221	1-216-442-11	METAL OXIDE	56K	5%	1W	F
			4014	000/	1/014		R222		METAL OXIDE		5%	1W	F
	-202-830-0		10K	20%	1/2W		R223	1-249-397-1		22	5%	1/4W	
		1 CARBON	820	5%	1/4W			1-249-397-1		100K	5%	1/4W	
		1 CARBON	27	5%	1/4W	- 1	R225	1-249-441-1		680	5%	1/4W	
		1 CARBON	100	5%	1/4W		R226	1-249-415-1	CARBON	000	370	.,	
R091 1	-247-895-9	1 CARBON	470K	5%	1/4W	1	D000	4 045 400 0	NACTAL	100K	1%	1/4W	
				401	4 /4544		R230	1-215-469-00		3.9K	1%	1/4W	
	-215-453-0		22K	1%	1/4W		R231	1-215-435-0		3.9K 2.2K	1%	1/4W	
	-215-445-0		10K	1%	1/4W		R232	1-215-429-0			5%	1/4W	
	-215-453-0		22K	1%	1/4W		R233	1-249-415-1	and the second second	680	1%	1/4W	
R095 1	-215-444-0	0 METAL	9.1K	1%	1/4W		R234	1-215-477-0	UMETAL	220K	1 70	1/400	
R096 1	-215-463-0	0 METAL	56 K	1%	1/4W				4 0 4 D D O N	470	5%	1/4W	,
							R250	1-249-413-1		470	20%	1/2W	
	-215-447-0		12K	1%	1/4W		R251	1-202-549-0		100		1/4W	
R104 1	-247-807-3	1 CARBON	100	5%	1/4W		R262	1-215-421-0		1K	1%	1/4W	
R105 1	-249-441-1	1 CARBON	100K	5%	1/4W		R263	1-215-427-0		1.8K	1%		
R106 1	I-249-415-1	1 CARBON	680	5%	1/4W		R264	1-249-424-1	1 CARBON	3.9 K	5%	1/4W	
R107 1	1-249-406-1	1 CARBON	120	5%	1/4W	F				0.016	5 0/	4 / 43 6	,
							R266	1-247-843-1		3.3K	5%	1/4W	
R11 1 1	1-215-425-0	0 METAL	1.5K	1%	1/4W		R303	1-249-437-1		47K	5%	1/4W	
R112 1	1-215-413-0	0 METAL	470	1%	1/4W		R304			100	5%	1/4W	
R113 1	1-249-401-	11 CARBON	47	5%	1/4W	F	R305			47K	5%	1/4W	
R114	1-249-393 -	11 CARBON	10	5%	1/4W		R306	1-249-415-1	1 CARBON	680	5%	1/4W	1
		I1 CARBON	390	5%	1/4W		-						
							R307	1-249-405-1	1 CARBON	100	5%	1/4\	
R116	1-247-791-	1 CARBON	22	5%	1/4W		R308	1-249-437-1	1 CARBON	47K	5%	1/4\	
_		11 CARBON	47	5%	1/4W	F	R309			4.7K	1%	1/4\	
_		11 CARBON	560	5%	1/4W		R310			4.7K	1%	1/4\	
	1-219-795-		33K	1%	1W	F	R311	1-215-425-0	00 METAL	1.5K	1%	1/4V	V
_		11 METAL OXID		5%	1W	F							
•							R312	1-215-405-0	00 METAL	220	1%	1/40	
R122	1-215-878-	00 METAL OXID	E 33K	5%	1W	F	R313	1-249-401 - 1	11 CARBON	47	5%	1/47	
		11 CARBON	22	5%	1/4W	F	R314	1-249-392-	11 CARBON	8.2	5%	1/4V	V



REF.NO.	PART NO.	DESCRIPTION		R	EMAR	<u> </u>	REF.NO.	PART NO.	DESCRIPTION		RI	EMARK
	1-249-412-11 1-247-791-91		390 22	5% 5%	1/4W 1/4W		C079 C400 C401	1-109-843-11 1-106-359-00 1-137-399-11	MYLAR	33PF 0.0047MF 0.1MF	5% 10% 5%	2KV 100V 50V
R319 1 R320 1 R321 1		CARBON		5% 5% 1% 5% 5%	1/4W 1/4W 1W 1W 1W	FFFF	C402 C403	1-137-370-11 1-126-965-11 1-136-601-11 1-136-165-00	FILM ELECT FILM	0.01MF 22MF 0.01MF 0.1MF	5% 20% 5% 5%	50V 50V 630V 50V
R323 R325 R326	1-249-397-11 1-249-441-11 1-249-415-11 1-215-469-00	CARBON CARBON CARBON	22 100K 680 100K	5% 5% 5% 1%	1/4W 1/4W 1/4W 1/4W	F		1-137-375-11 1-126-964-11 1-126-964-11 1-126-960-11	ELECT ELECT	0.068MF 10MF 10MF 1MF	5% 20% 20% 20%	50V
R331 R332 R333	1-215-435-00 1-215-429-00 1-249-415-11	METAL METAL CARBON	3.9K 2.2K 680	1% 1% 5%	1/4W 1/4W 1/4W		C410 C411 C412	1-126-964-11 1-102-112-00 1-101-810-00 1-126-964-11	ELECT CERAMIC CERAMIC	10MF 330PF 100PF	20% 10% 5% 20%	50V 500V
R350 R351 R362	1-215-477-00 1-249-413-11 1-202-549-00 1-215-421-00	CARBON SOLID METAL	220K 470 100	1%	1/4W 1/4W 1/2W		C414 C415	1-126-964-11 1-126-964-11 1-137-374-11 1-101-004-00	FILM ELECT FILM	0.01MF 10MF 0.047MF 0.01MF	5%	50V
R364 R365	1-215-427-00 1-249-424-11 1-249-437-11 1-247-843-11	CARBON CARBON	1.8K 3.9K 47K 3.3K	1% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W		C501 C503 C504 C505 C506	1-104-664-11 1-107-667-11 1-104-664-11 1-107-974-11 1-136-105-00	ELECT ELECT CERAMIC	47MF 2.2MF 47MF 47PF 0.33MF	20% 20% 20% 5% 5%	160V
	<variable i<="" td=""><td>RESISTOR> RES, ADJ, CAR</td><td>BON 47K</td><td></td><td></td><td></td><td>C507 C509 C511 C512</td><td>1-126-964-11 1-137-378-11 1-137-370-11 1-137-370-11</td><td>ELECT FILM FILM</td><td>10MF 0.22MF 0.01MF 0.01MF</td><td>20% 5% 5% 5%</td><td>50V 50V 50V 50V</td></variable>	RESISTOR> RES, ADJ, CAR	BON 47K				C507 C509 C511 C512	1-126-964-11 1-137-378-11 1-137-370-11 1-137-370-11	ELECT FILM FILM	10MF 0.22MF 0.01MF 0.01MF	20% 5% 5% 5%	50V 50V 50V 50V
SG001 SG101 SG201	1-519-504-11 1-519-504-11	GAP, SPARK GAP, DISCHAR GAP, DISCHAR GAP, DISCHAR	IGE				C513 C514 C515 C516 C517	1-104-999-11 1-101-006-00 1-106-228-00	MYLAR CERAMIC MYLAR FILM	0.1MF 0.047MF 0.22MF 0.1MF 220MF	10%	200V 50V 100V 50V
	<crystal></crystal>	VIBRATOR, CR					C518 C519 C520 C521 C522	1-102-002-00 1-137-370-11 1-126-942-61 1-128-528-11 1-137-374-11	FILM ELECT ELECT	0.01MF 1000MF 470MF 0.047MF	10% 5% 20% 20% 5%	
********	A-1346-569-A	D BOARD, COM		****	****	****	C523 C524 C525 C526 C527	1-137-399-11 1-126-960-11 1-126-964-11 1-136-169-00 1-106-343-00	ELECT ELECT FILM MYLAR	0.1MF 1MF 10MF 0.22MF 0.001MF		50V 50V 100V
· *	3-710-578-01 4-043-990-01 4-045-133-01	HOLDER, FUSI COVER, VOLU HEAT SINK HOLDER (B), L SPRING, IC	ME, 6 MOLI	D			C528 C532 C533 C534 C535 C536	1-126-965-11 1-106-367-00 1-101-821-00 1-115-349-51 1-161-754-00 1-115-349-51	MYLAR CERAMIC CERAMIC CERAMIC	0.01MF 0.0022MF 0.01MF 0.001MF 0.01MF	20% 10% 500V 10%	200V , 2KV
*	4-049-002-0 4-382-854-1	I SHEET, INSUL I HOLDER, LED I SCREW (M3X1) SCREW +BVT	0), P, SW (-	+)			C540 C541 C542 C543 C544	1-136-064-00 1-113-576-11 1-137-368-11	FILM FILM FILM CERAMIC CHIF	2200PF 0.0043MF 0.0047MF		2KV 2.5KV 50V 50V 50V
C07 7	<capacito 1-162-318-1</capacito 		0.001MF	10%	500V		C547 C548	1-126-941-11 1-137-425-11	ELECT	470MF 0.33MF	20%	25V 100V

The components identified by shading and mark ⚠ are critical for safety.

Replace only with part number specified.

Les composants identifiés per un tramé et une marque \(\frac{\Lambda}{2} \) sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

⚠および 愛回 印の部品は、安全性を維持 するために、重要な部品です。従って交換 時は、必ず指定の部品を使用して下さい。



REF.NO	PART NO.	DESCRIPTION		RE	MARK	REF.NO.	PART NO.	DESCRIPTION		RE	MARK_
0=40		P1. 5.5	0.4845	E0/	E0\/	C902	1-137-366-11	Ell M	0.0022MF	5%	50V
	1-137-399-11				50V						50V
C550	1-109-960-11				400V	C903	1-163-231-11	CERAMIC CHIP	IDPF	5 /0	30 v
C551	1-163-251-11	CERAMIC CHIP	100PF	5%	50V			-u	0.4145	E0/	E0\/
						C904	1-137-399-11				50V
C562	1-113-697-11	FILM	0.12MF	5%	200V	C905	1-137-399-11	FILM			50V
C563	1-102-110-00	CERAMIC	220PF	10%	50V	C906	1-137-399-11	FILM		5%	50V
C565	1-137-399-11	•		5%	50V	C907	1-126-963-11	ELECT	4.7MF	20%	50V
C567	1-136-121-00				200V	C908	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C569	1-137-370-11			5%	50V	0000		<u></u>			
C369	1-13/-3/0-11	LICIVI	0.011411	J /0	50 v	C909	1-102-106-00	CERAMIC	100PF	10%	50V
			0.504.65	E0/	0001/	C903	1-126-768-11				16V
C570	1-136-853-11			5%	200V					5%	50V
C571	1-126-960-11				50V	C912	1-136-165-00				50V
C573	1-137-364-11			5%	50V	C916	1-126-961-11				
C577	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C917	1-126-961-11	ELECT	2.2MF	20%	507
C578	1-126-767-11			20%	16V						
						C918	1-126-961-11	ELECT	2.2MF	20%	50V
C580	1-137-367-11	EIIM	0.0033MF	5%	50V	C919	1-126-961-11	ELECT	2.2MF	20%	50V
C581	1-137-307-11		0.1MF	5%	50V	C920	1-126-961-11		2.2MF	20%	50V
	-			10%		C921	1-126-961-11		2.2MF	20%	50V
C582	1-161-754-00		0.001MF			T .	1-120-901-11		0.1MF	5%	50V
C583	1-106-375-12	MYLAH	0.022MF		100V	C922	1-10/-399-11	I ILIVI	J. HVII	J /0	50 V
C584	1-163-121-00	CERAMIC CHIP	150PF	5%	50V			EU 14	0.04145	EQ/	E0\/
						C923	1-137-370-11		0.01MF	5%	50V
C585	1-102-002-00	CERAMIC	680PF	10%	500V	C924	1-137-399-11		0.1MF	5%	50V
C587	1-137-399-11		0.1MF	5%	50V	C925	1-126-934-11	ELECT	220MF	20%	16V
C590	1-126-965-11		22MF	20%	50V	C926	1-130-471-00	FILM	0.001MF	2%	50V
C591		CERAMIC CHIP		5%	50V	C928	1-137-370-11	FILM	0.01MF	5%	50V
C593	1-136-105-00		0.33MF	5%	200V						
C593	1-130-103-00) LIFIAI	U.JJIVII	3 /0	2001	C929	1-137-399-11	FILM	0.1MF	5%	50V
0-01			0.0045845	E0/	E0\/	5	1-126-963-11		4.7MF	20%	50V
C594	1-137-365-1		0.0015MF		50V	C930				5%	50V
C595	1-137-370-1°		0.01MF	5%	50V	C931	1-136-169-00		0.22MF		
C596	1-163-005-1	I CERAMIC CHIF	470PF	10%		C932	1-137-399-11		0.1MF	5%	50V
C599	1-104-665-1	1 ELECT	100MF	20%	25V	C933	1-126-934-11	ELECT	220MF	20%	16V
C607	1-126-967-1	1 ELECT	47MF	20%	50V						
						C934	1-126-961-11	I ELECT	2.2MF	20%	50V
C610	1-136-120-0	n FII M	0.22MF	5%	400V	C935	1-136-169-00	FILM	0.22MF	5%	50V
C611	1-126-967-1		47MF	20%		C936	1-137-399-11		0.1MF	5%	50V
				20%		C937	1-126-935-1		470MF	20%	16V
C612	1-126-968-1		100MF			C938	1-126-963-1		4.7MF	20%	50V
C613	1-102 - 074-0		0.001MF	10%		C936	1-120-903-1	I ELLOT	4.7 (VII	2070	001
C617	1-126-934-1	1 ELECT	220MF	20%	16V			. =	0.4145	E0/	50V
						C939	1-137-399-1		0.1MF	5%	
C619	1-136-619-1	1 FILM	0.0016MF	3%	2KV	C941	1-126-934-1	1 ELECT	220MF	20%	16V
C620	1-125-601-1	1 ELECT	470MF	20%	450V	C942	1-137-370-1	1 FILM	0.01MF	5%	50V
C621	1-136-120-0	0 FILM	0.22MF	5%	400V	C943	1-137-370-1	1 FILM	0.01MF	5%	50V
C633		0 CERAMIC	0.001MF	10%	50V	C944	1-104-665-1	1 ELECT	100MF	20%	25V
C634	1-102-074-0		100MF		25V	1		-			
0034	1-120-320-1	I LLLOI	TOOM	20 /0	201	C945	1-137-370-1	1 FILM	0.01MF	5%	50V
0005	4 400 500 4	1 ELECT	470M4E	200/	16\/	C945		1 CERAMIC CHI		5%	50V
C635	1-128-528-1		470MF		16V	1			0.1MF	5%	50V
C644	1-107-957-1		1MF	20%		C948	1-137-399-1		-		50V
C652	1-125-700-1	1 ELECT	220MF		200V	C949	1-137-399-1		0.1MF	5%	
C654	1-107-890-1	1 ELECT	2200MF		25V	C951	1-136-173-0	0 FILM	0.47MF	5%	50V
C655	1-107-884-1	1 ELECT	1000MF	20%	16V	1					
						C952	1-137-372-1	1 FILM	0.022MF	5%	50V
C657	1-107-956-1	1 FLECT	220MF	20%	200V	C953	1-137-372-1	1 FILM	0.022MF	5%.	50V
C658	1-107-936-1		470MF	20%		C954	1-137-399-1		0.1MF	5%	50V
C659	1-107-696-1		100MF		25V	C960	1-137-374-1		0.047MF	5%	50V
					25V	C961		1 CERAMIC CHI		10%	
C660	1-107-890-1		2200MF			0901	1-100-001-1	- OLIMBIO OI III		. 0 / 0	
C662	1-107-899-	IT ELECT	3300MF	20%	35V	0000	1 100 001 1	1 ELECT	O OME	20%	50V
						C962			2.2MF		
C665	1-137-364-	I1 FILM	0.001MF	5%	50V	C964			0.001MF	5%	50V
C66 6	1-126-967-	11 ELECT	47MF	20%	16V	C965			0.1MF	5%	50V
C69 O	1-107-889-		220MF	20%	25V	C967	1-163-009-1	1 CERAMIC CHI	P 0.001MF	10%	
	1-113-924-	the state of the s	0.0047MF			C1602	₾1-136-360-5	1 FILM	0.22MF	20%	250V
	▲1-113-924-		0.0047MF			1					
JUIZ	ش ۱-۱۱۰۵-۵ ۲۹ ۳۰	2. OE. 0 11V11O	0.0047,000	/-	,	C1603	3∆1-136-360-5	1 FILM	0.22MF	20%	250V
Cena	84.440.004	11 CERAMIC	0.0047MF	2000/	2501/	ŀ	1 <u>∆</u> 1-113-920-9		0.0022MF		
	△1-113-924-								0.0022MF	= 20%	250V
	1-113-924-		0.0047MF			1	5 <u> </u>		0.0022IMF		
C901	1-137-399-	11 FILM	0.1MF	5%	50V	C1606	5∆1-113-920-9	JI UERAMIU	U.UU221VIF	20%	2001



△および □ 印の部品は、安全性を維持 するために、重要な部品です。従って交換 時は、必ず指定の部品を使用して下さい。

Les composants identifiés per un tramé et une marque Λ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

									DEMARK
REF.NO. PA	ART NO.	DESCRIPTION		RE	MARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C1607∆1-1	13-920-91	CERAMIC	0.0022MF	20%	250V	D607	8-719-302-43	DIODE EL 17	
010012111	10 020 0.1	OLI VIIIIO	O.OOZZZIVII	2070	2001		8-719-302-43		
C1611 1-12	26-967-11	ELECT	47MF	20%	50V	ı	8-719-302-43		
C1612 1-12			2200MF	20%	25V			DIODE ERA38-06	
		CERAMIC CHIP	330PF	10%	50V				
C1802 1-16	63-003-11	CERAMIC CHIP	330PF	10%	50V	D611	8-719-979-80	DIODE UF5406	
						D612	8-719-970-83	DIODE HSS82	
								DIODE UF3ML-6505	
<c0< td=""><td>ONNECTO</td><td>)R></td><td></td><td></td><td></td><td></td><td></td><td>DIODE D8LC20U</td><td></td></c0<>	ONNECTO)R>						DIODE D8LC20U	
						D654	8-719-051-97	DIODE 3DL41A(LC6-15)	
		1 CONNECTOR		•					
		1 PLUG, CONNE				ı		DIODE 3DL41A(LC6-15)	
		1 PLUG, CONNE				ı	8-719-302-43		
		1 PLUG, CONNE				1		DIODE SB360	
CND 13 1-	506-467-1	1 PIN, CONNEC	IOR 2P			1		DIODE 1SS119-25 DIODE 1SS119-25	
CNEO2 1	605 015 1	1 TAB (CONTAC	T\			D000	0-719-911-19	DIODE 188119-25	
		0 PIN, CONNEC				D001	8-710-404-40	DIODE MA111	
		1 TAB (CONTAC						DIODE MA111	
		1 PLUG, CONNE						DIODE RD5.6ESB2	
		1 PIN, CONNEC		DARD)	4P			DIODE RD5.6ESB1	
0.11.001	000 000 1	, , m, oom,e		<i>,</i> ,				DIODE 1SS119-25	
CN1602*1-	695-561-1	1 PIN, CONNEC	TOR (PC BC	DARD)	7P			2.022 .001.020	
		1 PIN, CONNEC				D910	8-719-911-19	DIODE 1SS119-25	
		1 TAB (CONTAC		,				DIODE 1SS226	
		1 PIN, CONNEC		DARD)	2P	D913	8-719-911-19	DIODE 1\$\$119-25	
						D914	8-719-911-19	DIODE 1SS119-25	
						D915	8-719-800-76	DIODE 1SS226	
<di< td=""><td>IODE></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></di<>	IODE>								
								DIODE 1SS226	
		DIODE RD15ES						DIODE 1SS119-25	
		DIODE EGP10E					8-719-302-21		*
		DIODE RD15ES				1		DIODE RD12ESB2	
		DIODE FMQ-G5				D1605	8-/19-510-48	DIODE D1N20R	
D5O2 8-7	19-979-58	DIODE EGP10E	,			D1606	0.710.510.40	DIODE DANGOD	
DEO4 0.7	710 051 07	DIODE 3DL41A	// CG 15\					DIODE D1N20R DIODE SEL1922D-C	
		DIODE SDL41A				l .		DIODE SPB-26MVWF	
		DIODE SB340	JUE .					DIODE SEL1922D-C	
		DIODE HSS82				D1000	0 / 10 01 1 00	DIODE CELICEED C	
		DIODE HSS82							
							<fuse></fuse>		
D515 8-7	⁷ 19-979-58	DIODE EGP100)						
		DIODE RD6.8E				F1601	∆ 1- 576-231-1	1 FUSE (H.B.C.) 4A/250V	
D522 8-7	719-911-19	DIODE 1SS119	-25					1 FUSE (H.B.C.) 4A/250 V	
		DIODE 1SS119				F1603	∆ 1-532-742-1	1 FUSE, GLASS TUBE 1.6A/125	5 V
D525 8-7	719-911-19	DIODE 1SS119	-25						
DEO	740 040 5	DIODE DOSS	0051 000:				EEDDITE :	- A D	
		DIODE RGP02-	20EL-6394				<ferrite be<="" td=""><td>=AD></td><td></td></ferrite>	=AD>	
		DIODE U05G DIODE EGP10I	`			EDEA	4 440 000 44	EEDDITE DE AD INIDUCTOR A	시티니닌
		DIODE EGP 101 DIODE 1SS119						FERRITE BEAD INDUCTOR 0. FERRITE BEAD INDUCTOR 0.	
_		DIODE 188119						FERRITE BEAD INDUCTOR 0.	
DO-13 0-7	110-011-12	, PIODE 100118						FERRITE BEAD INDUCTOR 0.	
D544 8-7	719-911-19	DIODE 1SS119	-25			1		FERRITE BEAD INDUCTOR 0.	
		DIODE RD4.7E							
		DIODE 1SS119				FB650	1-410-396-41	FERRITE BEAD INDUCTOR 0.	.45UH
		DIODE 1SS119				1		FERRITE BEAD INDUCTOR 1.	
D5 9 8 8-7	719-110-41	DIODE RD15E	SB2			FB902	1-410-397-21	FERRITE BEAD INDUCTOR 1.	.1UH
man of the same of		DIODE MA111							
	And a Substance of the	B DIODE GBU4JI	6088				<ic></ic>		
		DIODE U05G							-
		B DIODE MTZJ-7						! IC LA6500-FA	
DeO2 8-	/19-921-6	B DIODE MTZJ-7	.5B			1		PIC LA6500-FA	
Deco o	710 000 11	ם הוסחר בי ז־				1		BIC NJM2903D	
₽9 .	119-302-43	3 DIODE EL1Z				10501/	ug-759-342-07	' IC UPC5023CS-095	1.7

The components identified by shading and mark $ilde{\Lambda}$ are critical for safety. Replace only with part number specified.

Les composants identifiés per un tramé et une marque extstyle e

⚠および ■ 印の部品は、安全性を維持するために、重要な部品です。従って交換時は、必ず指定の部品を使用して下さい。



	DECODINE ION	DEMARK		. PART NO.	DESCRIPTION	REMARK
REF.NO. PART NO	. DESCRIPTION	REMARK	HEF.NO	. PANT NO.	DESCRIPTION	
IC502 8-759-054-	26 IC HD74HC123AP			1-411-738-11	COIL, HORIZONTAL LINEARI	ΓY
			L601	1-459-946-11	COIL, NOISE FILTER COIL, NOISE FILTER	
IC504 8-759-980-			l		INDUCTOR 100UH	
IC601 8-749-013-			L651	1-412-337-31	INDOCTOR TODOR	
IC602 8-759-335- IC650 8-759-464-			L652	1-412-537-31	INDUCTOR 100UH	
10000 8-709-404-	64 PHOTO COUPLER PC123!	= 2	L653		INDUCTOR 100UH	
10001 0-749-010	041110100001221110120	-	L900	1-412-537-31	INDUCTOR 100UH	
IC653 8-749-010-	64 PHOTO COUPLER PC123I	F2	L901		INDUCTOR 100UH	
	61 IC ST7271N5B1/CBO		L903	1-412-537-31	INDUCTOR 100UH	
	08 IC SN74HC02AN		1.4004	4 440 007 04	FERRITE BEAD INDUCTOR 1	111111
IC903 8-759-165-			LIGUI	1-410-397-21	FERRITE BLAD INDOCTOR	.1011
IC904 8-759-336-	24 IC 1DA9103					
IC905 8-759-000-	49 IC MC14066BCP			<ic link=""></ic>		
IC908 8-759-503-						
IC1611 8-759-701-	-75 IC NJM7805FA		PS401	▲ 1-532-838-4	11 LINK, IC 800MA/90V	t .
<chip co<="" td=""><td>NDUCTOR></td><td></td><td></td><td><transist< td=""><td>OR></td><td></td></transist<></td></chip>	NDUCTOR>			<transist< td=""><td>OR></td><td></td></transist<>	OR>	
ID001 4 046 006	-91 CONDUCTOR, CHIP	(3216)	Q400	8-729-120-28	3 TRANSISTOR 2SC1623-L5L6	
JR001 1-210-290-	-91 CONDUCTOR, CHIP	(2012)		8-729-119-78	TRANSISTOR 2SC2785-HFE	
JR003 1-216-295	-91 CONDUCTOR, CHIP	(2012)	Q403	8-729-119-76	TRANSISTOR 2SA1175-HFE	
JR004 1-216-295	-91 CONDUCTOR, CHIP	(2012)	Q441	8-729-027-59	TRANSISTOR DTC144EKA-T	146
	-91 CONDUCTOR, CHIP	(2012)	Q501	8-729-026-49	TRANSISTOR 2SA1037AK-T1	146-H
10000 1 010 000	OF CONDUCTOR CHIE	(3216)	0502	8-720-035-83	7 TRANSISTOR 2SK1737-TP	
JRUU6 1-216-296	-91 CONDUCTOR, CHIP -91 CONDUCTOR, CHIP	(3216)	Q502	8-729-027-97	7 TRANSISTOR IRFI9630G-LF	
JR007 1-216-296	-91 CONDUCTOR, CHIP	(2012)	Q507	8-729-027-9	5 TRANSISTOR 2SC5129(LBS)	(YNC
JR009 1-216-295	-91 CONDUCTOR, CHIP	(2012)	Q510		2 TRANSISTOR IRFPE40LF20	
JR010 1-216-295	-91 CONDUCTOR, CHIP	(2012)	Q512	8-729-027-9	6 TRANSISTOR IRLI530G	
IR011 1-216-205	-91 CONDUCTOR, CHIP	(2012)	Q513	8-729-027-9	6 TRANSISTOR IRLI530G	
JB012 1-216-295	5-91 CONDUCTOR, CHIP	(2012)	Q514	8-729-027-9	6 TRANSISTOR IRLI530G	
JR013 1-216-295	5-91 CONDUCTOR, CHIP	(2012)			6 TRANSISTOR 2SA1175-HFE	
JR014 1-216-296	6-91 CONDUCTOR, CHIP	(3216)			0 TRANSISTOR DTC124EK	
JR015 1-216-296	6-91 CONDUCTOR, CHIP	(3216)	Q522	8-729-143-7	9 TRANSISTOR 2SK738	
JR018 1-216-296	S-91 CONDUCTOR, CHIP	(3216)	Q524	8-729-119-7	8 TRANSISTOR 2SC2785-HFE	
JR020 1-216-296	5-91 CONDUCTOR, CHIP	(3216)			8 TRANSISTOR 2SC2785-HFE	
JR021 1-216-296	6-91 CONDUCTOR, CHIP	(3216)	Q526	8-729-119-7	6 TRANSISTOR 2SA1175-HFE	
	6-91 CONDUCTOR, CHIP	(3216)	Q604	8-729-028-3	4 TRANSISTOR 2SD1640Q,R	
JR023 1-216-296	6-91 CONDUCTOR, CHIP	(3216)	Q605	8-729-141-8	3 TRANSISTOR 2SB1094-LK	
JBO24 1-216-296	6-91 CONDUCTOR, CHIP	(3216)	Q606	8-729-029-6	8 TRANSISTOR DTC114TSA	
JRO25 1-216-296	6-91 CONDUCTOR, CHIP	(3216)		8-729-029-8	6 TRANSISTOR DTC124ESA	
JRO26 1-216-296	6-91 CONDUCTOR, CHIP	(3216)	Q656		6 TRANSISTOR DTC124ESA	
JRO27 1-216-29	5-91 CONDUCTOR, CHIP	(2012)	Q657		6 TRANSISTOR DTC124ESA	
JRO28 1-216-29	5-91 CONDUCTOR, CHIP	(2012)	Q658	8-729-140-9	6 TRANSISTOR 2SD774-34	
JBO30 1-216-29	6-91 CONDUCTOR, CHIP	(3216)	Q659	8-729-119-7	78 TRANSISTOR 2SC2785-HFE	
JRO31 1-216-29	6-91 CONDUCTOR, CHIP	(3216)	Q660		76 TRANSISTOR 2SA1175-HFE	
JRO32 1-216-29	6-91 CONDUCTOR, CHIP	(3216)	Q661	8-729-140-9	7 TRANSISTOR 2SB734-34	
JRO33 1-216-29	6-91 CONDUCTOR, CHIP	(3216)			88 TRANSISTOR DTC114TSA	
JRO34 1-216-29	6-91 CONDUCTOR, CHIP	(3216)	Q663	8-729-820-0	03 TRANSISTOR 2SB1140-S	
			Q664	8-729-029-6	88 TRANSISTOR DTC114TSA	_
<coil></coil>					78 TRANSISTOR 2SC2785-HFF	
150	O 44 INDUCTOR 4 OF MAIL				76 TRANSISTOR 2SA1175-HFE 28 TRANSISTOR 2SC1623-L5L	
L5O1 1-412-55	50-11 INDUCTOR 1.2MMH 37-31 INDUCTOR 100UH		Q902		28 THANSISTOR 23C 1023-L3L 00 TRANSISTOR DTC124EK	.~
	04-00 COIL, WITH CORE		Q300	, 0,200014	30	
	31-31 INDUCTOR 33UH		Q904	8-729-120-2	28 TRANSISTOR 2SC1623-L5L	.6
	04-00 COIL, WITH CORE		Q907	7 8-729-119-	78 TRANSISTOR 2SC2785-HFI	E
-	•				78 TRANSISTOR 2SC2785-HF	
L5 O 7 1-412-53	31-31 INDUCTOR 33UH		Q180)1 8-729-027-	38 TRANSISTOR DTA144EKA-	1146



△および ② 印の部品は、安全性を維持 するために、重要な部品です。従って交換 時は、必ず指定の部品を使用して下さい。

Les composants identifiés per un tramé et une marque \(\frac{\text{\Lambda}}{\text{sont}}\) critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION		RI	EMARK	REF.NO.	PART NO.	DESCRIPTION	<u> </u>	R	EMAR	<u>K_</u>
Q1802	8-729-027-38	TRANSISTOR D	TA144EK	A-T146		R451	1-216-474-11	METAL OXIDE	82	5%	3W	F
							1-249-428-11		8.2K	5%	1/4W	
Q1803	8-729-120-28	TRANSISTOR 2	SC1623-L	5L6		R453	1-216-474-11	METAL OXIDE	82	5%	ЗW	F
						R454	1-219-683-11	METAL	220K	5%	1/2W	
	<resistor:< td=""><td></td><td></td><td></td><td></td><td>R455</td><td>1-216-391-11</td><td>METAL OXIDE</td><td>1.5</td><td>5%</td><td>ЗW</td><td>F</td></resistor:<>					R455	1-216-391-11	METAL OXIDE	1.5	5%	ЗW	F
	KNESIS I UN:	>				R457 ⚠	1-215-476-91	METAL	200K	1%	1/4W	
R002	1-247-807-31	CARBON	100	5%	1/4W	R458	1-249-397-11	CARBON	22	5%	1/4W	
	1-247-807-31		100	5%	1/4W		1-215-429-00		2.2K	1%	1/4W	
		METAL GLAZE		5%	1/10W		1-215-429-00		2.2K	1%	1/4W	
		METAL GLAZE		5%	1/10W	R472	1-249-389-11	CARBON	4.7	5%	1/4W	F
R006	1-216-049-91	METAL GLAZE	1K	5%	1/10W				40016	40/	4 /4144	
			414	5 0/	4 (4) 4 (R473	1-215-469-00		100K	1%	1/4W	
R007	1-249-417-11		1K	5%	1/4W	R474	1-215-493-00		1M	1%	1/4W	
		METAL GLAZE		5%	1/10W	1	1-215-421-00		1K	1%	1/4W 1/4W	
	1-215-445-00		10K	1%	1/4W	R480	1-249-397-11		22	5% 5%	1/4VV 1/4W	
R400	1-215-441-00		6.8K	1%	1/4W	R481	1-249-419-11	CARBON	1.5K	5%	1/477	
R401	1-215-443-00	IMETAL	8.2K	1%	1/4W	D404	1 016 005 00	METAL GLAZE	221/	5%	1/10V	v
D400	1 040 400 44	CADDON	101/	E0/	1/4W	R484 R485		METAL GLAZE		5%	1/10V	
R402	1-249-429-11		10K	5% 5%	1/4VV 1/4W	R485		METAL GLAZE		5%	1/10V	
R403 R404	1-249-439-11 1-215-485-00		68K 470K	5% 1%	1/4VV 1/4W	R490	1-249-417-11		1K	5%	1/4W	
R405	1-249-401-11		470K	5%	1/4VV 1/4W	R491	1-249-477-11		180K	1%	1/4W	
R406		METAL CHIP	12K		61/10W	11491	1-213-473-00	WILTAL	1001	1 /0	1/	
N400	1-210-077-11	METAL CHIP	1211	0.30 /	01/1000	R492	1-215-453-00	METAL	22K	1%	1/4W	
R407	1-215-449-00	METAL	15K	1%	1/4W	R493		METAL OXIDE		5%	3W	
R408	1-249-383-11		1.5	5%	1/4W F	R494	1-215-476-00		200K	1%	1/4W	
R409	1-215-429-00	· · · · · · · · · · · · · · · · · · ·	2.2K	1%	1/4W	R496	1-215-457-00		33K	1%	1/4W	
R410		METAL OXIDE		5%	2W F	R497	1-249-417-11		1K	5%	1/4W	
R411		METAL CHIP	43K		61/10W	1		0		- / -		
	1 210 000 1					R498	1-215-461-00	METAL	47K	1%	1/4W	
R412	1-216-669-1	METAL CHIP	5.6K	0.50%	61/10W	R499	1-249-377-11		0.47	5%	1/4W	F
R415	1-249-419-11		1.5K	5%	1/4W	R502	1-249-417-11	CARBON	1K	5%	1/4W	F
R416	1-249-441-1	CARBON	100K	5%	1/4W	R503	1-249-437-11	CARBON	47K	5%	1/4W	
R417	1-215-427-00	METAL	1.8K	1%	1/4W	R504	1-249-437-11	CARBON	47K	5%	1/4W	
R418	1-216-383-1	1 METAL OXIDE	0.33	5%	3W F							
						R505	1-216-657-11	METAL CHIP	1.8K	0.509	%1/10 \	
R419	1-247-887-00	CARBON	220K	5%	1/4W	R506		METAL GLAZE		5%	1/10\	
R420	1-247-889-00	CARBON	270K	5%	1/4W	R507	1-249-437-11		47K	5%	1/4W	
R421	1-202-963-1		1	1%	1W	R508		METAL CHIP	100K		%1/10\	
R422		1 METAL OXIDE		5%	1W F	R509	1-218-760-11	METAL CHIP	220K	0.50°	%1/10\	N
R423	1-215-439-0	JMETAL	5.6K	1%	1/4W	DC44	1 010 105 01	METAL OLAZE	00014	E0/	1/10\	A /
D404	1 045 400 0	0.145741	E 01/	40/	4 /4\41	R511	1-249-438-11	METAL GLAZE	220K 56K	5% 5%	1/10\ 1/4W	
R424 R425	1-215-439-0		5.6K 5.6K	1%	1/4W %1/10W			METAL CHIP	12K		۱/ 4۷۷ (1/10%	
R426	1-249-383-1	1 METAL CHIP	1.5		1/4W F			METAL CHIP			%1/10\ %1/10\	
R42 7		1 METAL CHIP	1.5 12K		%1/10W	1		METAL CHIP	180K		%1/10\ %1/10\	
R428		O METAL GLAZE		5%	1/10W	1310	1-210-730-1	I WILLAL OTHE	1001	0.50	/0 1/ 10	•
11720	1-210-007-0	O IVIL I AL GLAGE	۲.۲۱	J /0	17 10 9 9	R519	1-216-089-01	I METAL GLAZE	47K	5%	1/10\	N
R429	1-249-417-1	1 CARBON	1K	5%	1/4W	R520		I METAL GLAZE I METAL CHIP	8.2K		%1/10\	
R431		0 METAL GLAZE		5%	1/10W	R521		METAL OXIDE		5%	1W	
R432		1 METAL GLAZE		5%	1/10W	R524		METAL OXIDE		5%	2W	
R433		O METAL GLAZE		5%	1/10W	R525		METAL CHIP	47K		%1/10 ¹	
R434		0 METAL OXIDE		5%	1W F			•				
						R526	1-216-695-1	1 METAL CHIP	68K	0.50	%1/10	Λ
R435	1-249-421-1	1 CARBON	2.2K	5%	1/4W	R527	1-216-689-1	METAL CHIP	39K	0.50	%1/10	Λ
R436		1 METAL OXIDE		5%	3W F		1-216-675-1	1 METAL CHIP	10K	0.50	%1/10	Λ
R437	1-216-073-0	O METAL GLAZE	10K	5%	1/10W	R530	1-249-421-1	1 CARBON	2.2K	5%	1/4W	1 F
R438	1-216-065-0	O METAL GLAZE	4.7K	5%	1/10W	R531	1-216-079-00	METAL GLAZE	18K	5%	1/10	^
R439	1-249-383-1		1.5	5%	1/4W F							
						R532	1-216-073-0	METAL GLAZE	10K	5%	1/10	M
R44 O	1-249-428-1	1 CARBON	8.2K	5%	1/4W	R564	1-249-429-1	1 CARBON	10K	5%	1/4\	I
R441	1-249-405-1	1 CARBON	100	5%	1/4W F	R565	1-216-671-1	1 METAL CHIP	6.8K	0.50	%1/10	_
R444	1-247-863-9	1 CARBON	22K	5%	1/4W	R566	1-215-912-1	1 METAL OXIDE	150	5%	З₩	F
R445		00 METAL OXIDE		5%	2W F	R567	1-215-907-1	1 METAL OXIDE	22	5%	ЗW	F
R450	∆ 1-215-463-9	1 METAL	56K	1%	1/4W							
						R568	1-215-859-0	0 METAL OXIDE	22	5%	1W	F



REF.NO	. PART NO.	DESCRIPTION	l	RE	MARK		REF.NO.	PART NO.	DESCRIPTION		RI	MAR	K
				F0/	414/	F	R682	1.216-340-00	METAL OXIDE	1	5%	1W	F
		METAL OXIDE				ا ا		1-249-401-11		47	5%	1/4W	
		METAL CHIP	6.8K	0.50%		_	R683		METAL OXIDE		5%	1W	F
	1-249-377-11		0.47		1/4W	-	R684	1-210-442-00	WILL TAL OXIDE	Jak	0 / 0		•
R572	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W		DOOL	1 015 469 00	METAL	91K	1%	1/4W	
								1-215-468-00		4.7K	5%	1/4W	
R573	1-216-073-00	METAL GLAZE	10K		1/10W			1-249-425-11			5%	1/100	
		METAL GLAZE			1/10W		R900	1-216-049-91	METAL GLAZE	IK		1/100	
		METAL GLAZE		5%	1/10W		R901	1-216-065-00	METAL GLAZE	4.7K	5%		
R576	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W		R902	1-216-065-00	METAL GLAZE	4./K	5%	1/10V	٧
R577	1-249-437-11	CARBON	47K	5%	1/4W						50 /	1/100	.,
							R903		METAL GLAZE		5%		
R582	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W		R904		METAL GLAZE		5%	1/100	
R583	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W		R905	1-218-754-11	METAL CHIP	120K	0.50%		
		METAL CHIP	15K	0.50%	1/10W	i			METAL GLAZE		5%	1/10	
R608	1-215-929-11	METAL OXIDE	100K	5%	ЗW	F	R908	1-247-863-91	CARBON	22K	5%	1/4W	
		METAL OXIDE		5%	1W	F							
11000							R910	1-216-089-91	METAL GLAZE	47 K	5%	1/10\	
R613	1-217-241-00	WIREWOUND	0.22	10%	3W	F	R912	1-215-477-00	METAL	220K	1%	1/4W	
R614	1-249-424-11		3.9K		1/4W	ĺ	R913	1-216-081-00	METAL GLAZE	22K	5%	1/10\	Ν
	1-247-807-31		100		1/4W	-	R914	1-216-081-00	METAL GLAZE	22K	5%	1/10\	Ν
	1-249-419-11		1.5K		1/4W	Ì	R915		METAL GLAZE		5%	1/10\	Ν
			1.5K		1/4W		11010	. 2,00.0					
R621	1-249-417-11	CARBON	IIX	3 /0	17-700		R916	1-216-049-91	METAL GLAZE	1K	5%	1/10\	N
D004	4 040 000 11	CADDON	10	5%	1/4W	F	R918		METAL GLAZE		5%	1/10\	W
R624	1-249-393-11		0.47		1/4W		R919		METAL GLAZE		5%	1/10\	W
R627	1-249-377-11				1/4W	'	R920		METAL GLAZE		5%	1/10	W
R631	1-249-417-11		1K				R921		METAL GLAZE		5%	1/10	W
R632	1-202-968-11	WIREWOUND	1.2	5%	10W	F	nazı	1-210-037-00	METAL OLALL	2.21			
R633	1-216-377-1	METAL OXIDE	4.7	5%	2W	Г	R923	1-249-425-11	CARRON	4.7K	5%	1/4W	ı
				F0/	OVAZ	r	R924		METAL GLAZE		5%	1/10	
R634			5.6	5%	2W	F		1-215-451-00		18K	1%	1/4\	
R636	1-202-933-6		0.1		1/2W		R925) METAL GLAZE		5%	1/10	
R637	1-249-377 - 1		0.47	5%	1/4W	۲	R926				5%	1/10	
R650	1-211-874-1		0.12		1/2W		R927	1-216-083-00) METAL GLAZE	2110	370	.,	• •
R652	1-211-874-1	1 FUSIBLE	0.12	10%	1/2W		Booo	4 040 000 00	METAL GLAZE	271	5%	1/10	W
							R928			39K	5%	1/40	
R65 3	1-219-154-1		0.12		1/4W		R929	1-249-436-1			5%	1/10	
R654	1-219-154-1		0.12		1/4W		R930		METAL GLAZE		5%	1/10	
R655	1-211-874-1	1 FUSIBLE	0.12		1/2W		R931		METAL GLAZE		5%	1/10	
R65 6	1-247-863-9		22K	5%	1/4W		R932	1-216-071-00	METAL GLAZE	0.2N	5/0	1710	W1
R657	1-249-429-1	1 CARBON	10K	5%	1/4W			4 045 445 0	D. N. 457 A. I	101/	1%	1/4V	۸,
							R933	1-215-445-00		10K	5%	1/10	
R658	1-215-467-0		82K	1%	1/4W	_	R934		METAL GLAZE			1/10	
R659	1-216-373-1	1 METAL OXIDE	2.2	5%	2W	F	R935		METAL GLAZE		5%	1/40	
R660	1-249-420-1	1 CARBON	1.8K	5%	1/4W		R936	1-249-393-1		10	5%		
R661	1-249-429-1	1 CARBON	10K	5%	1/4W		R937	1-216-071-0	0 METAL GLAZE	: 8.2K	5%	1/10) Vî
R662	1-215-468-0	0 METAL	91K	1%	1/4W						50/	4/40	ALII
							R938		0 METAL GLAZE		5%	1/10	
R663	1-249-417-1	1 CARBON	1K	5%	1/4W		R939		1 METAL GLAZE		5%	1/10	
R664	1-249-417-1	1 CARBON	1K	5%	1/4W		R940		0 METAL GLAZE		5%	1/10	
R665	1-215-468-0	0 METAL	91K	1%	1/4W		R941	1-249-434-1		27K	5%	1/4\	
R666	1-249-403-1	1 CARBON	68	5%	1/4W		R944	1-216-063-9	1 METAL GLAZE	E 3.9K	5%	1/10)V/
R669		1 CARBON	2.2K	5%	1/4W		i						
							R945	1-216-063-9	1 METAL GLAZE	E 3.9K	5%	1/10	
R67 0	1-249-417-1	1 CARBON	1K	5%	1/4W		R946		1 METAL GLAZE		5%	1/10	
R671			47K	5%	1/4W		R947	1-216-093-0	O METAL GLAZE	E 68K	5%	1/10	
		11 METAL OXIDE		5%	2W	F	R948	1-216-121-9	1 METAL GLAZE	E 1M	5%	1/10	₩C
		1 METAL OXIDE		5%	2W	F	R949	1-216-101-0	O METAL GLAZE	E 150K	5%	1/10	OA
	1-249-435-		33K	5%	1/4W		1						
1107 4	1 2,40 100						R950		0 METAL GLAZE		5%	1/1	
B675	1-249-438-	11 CARBON	56 K	5%	1/4W		R951	1-216-101-0	0 METAL GLAZE	E 150K	5%	1/1	O₩
	1-243-430-		220K	5%	1/4W		R952	1-216-101-0	00 METAL GLAZE	E 150K	5%	1/1	VΩ
	1-247-667-6		330	5%	1/4W		R953	1-216-065-0	00 METAL GLAZI	E 4.7K	5%	1/1	OV
	1-249-411-		1K	5%	1/4W		R954		0 METAL GLAZI		5%	1/1	OW
_	1-249-417-		1K	5%	1/4W		1.55	• •					
HO/ S	, 1-243 - 41/-	I CALIDON	118	5 /0	., . • •		R955	1-216-689-	I1 METAL GLAZI	E 39K	5%	1/1	ON
Deec	1-249-417-	11 CARRON	1K	5%	1/4W	,	R956		11 CARBON	2.2K	5%	1/4	W
R681	-	00 CARBON	82	5%	1/4W		R957		11 METAL CHIP	7.5K	0.50)%1/1	OV
1100	1-243-404-	OU OU IDOIA	<u>ي</u>	3 /0	., +••		1		+	•			



△および □ 印の部品は、安全性を維持 するために、重要な部品です。従って交換 時は、必ず指定の部品を使用して下さい。 Les composants identifiés per un tramé et une marque <u>A</u> sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié. The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

					VI				
REF.NO. PART N	IO. DESCRIPTION	I	RE	MARK	REF.NO.	PART NO.	DESCRIPTION	l	REMARK
B958 1-216-05	5-00 METAL GLAZE	1.8K .	5%	1/10W	B1819	1-216-655-11	METAL CHIP	1.5K	0.50%1/10W
	9-11 METAL CHIP			1/10W	111010	1 210 000 11		,,,,,,	
11909 1-210-00	3-11 METAL OF III	000	3.30 /6	11/1000	B1820	1-216-663-11	METAL CHIP	3.3K	0.50%1/10W
D060 4 046 07	0 00 METAL OLAZE	101/	5%	1/10W			METAL GLAZE		5% 1/10W
	3-00 METAL GLAZE			1					0.50%1/10W
	9-11 METAL CHIP			1/10W			METAL CHIP	3.3K	
	9-91 METAL GLAZE			1/10W			METAL CHIP	470	0.50%1/10W
R963 1-216-09	7-91 METAL GLAZE	100K 5	5%	1/10W	R1832	1-216-699-11	METAL CHIP	100K	0.50%1/10W
R965 1-249-41	7-11 CARBON	1K :	5%	1/4W					
R966 1-216-09	7-91 METAL GLAZE	100K	5%	1/10W		<variable f<="" td=""><td>RESISTOR></td><td></td><td></td></variable>	RESISTOR>		
R967 1-249-42			5%	1/4W					
	1-00 METAL GLAZE			1/10W	BV470	↑ 1-241-767-2	1 RES, ADJ, CEI	RMET 100K	(SCREEN)
R970 1-249-41			5%	1/4W			—	, , , , , , , , , , , , , , , , , , ,	(
	3-00 METAL GLAZE			1/10W					
H3/2 1-210-0/	3-00 METAL GLAZE	1010	J /6	171044		<relay></relay>			
D074 4 040 00	0 44 OADDON	40	F0/	1/4\4/		CHELA12			
R974 1-249-39				1/4W F	5) (100	===	u per M		
R975 1-249-42				1/4W	HY160	1∆1-755-128-	ITHELAY		
R976 1-216-07	'3-00 METAL GLAZE	10K	5%	1/10W					
R977 1-249-41	7-11 CARBON	1K :	5%	1/4W					
R979 1-249-41	7-11 CARBON	1K :	5%	1/4W		<switch></switch>			
	• •								
R980 1-216-04	19-91 METAL GLAZE	1K	5%	1/10W	S500	1-572-707-11	SWITCH, LEVE	R (H. CENT)
	21-91 METAL GLAZE		5%	1/10W			SWITCH, SLIDE	,	•
R984 1-247-89			5%	1/4W			SWITCH, TACT	` '	
							SWITCH, TACT		
	9-00 METAL GLAZE		5%	1/10W					
H989 1-216-10	05-91 METAL GLAZE	220K	5%	1/10W	51817	1-692-431-21	SWITCH, TACT	ILE (GEOM)
	19-91 METAL GLAZE		5%	1/10W			SWITCH, TACT		
R991 1-216-1	13-00 METAL GLAZE	470K	5%	1/10W	S1819	1-692-431-21	SWITCH, TACT	ILE (POWE	R)
R992 1-216-1	13-00 METAL GLAZE	470K	5%	1/10W	\$1822	1-692-431-21	SWITCH, TACT	ILE (BRIGH	T-LOW)
B993 1-216-04	19-91 METAL GLAZE	1K	5%	1/10W	S1823	1-692-431-21	SWITCH, TACT	ILE (BRIGH	T-HI)
	77-00 METAL GLAZE		5%	1/10W			SWITCH, TACT		
11004 12100	TO WE THE GENEE	1011	0 / 0	., , , , ,	0.02.			(· ·· ,
D007 1 040 4	14 11 CADRON	560	5%	1/4W	S1825	1_602_/31_21	SWITCH, TACT	ILE (CONT-	I OW)
R997 1-249-4					31023	1-032-431-21	SWITCH, TACT	ILL (CONT	2011)
R998 1-247-8			5%	1/4W					
	73-00 METAL GLAZE		5%	1/10W			_		
	95-00 METAL GLAZE		5%	1/10W		<spark ga<="" td=""><td>P></td><td></td><td></td></spark>	P>		
R1001 1-216-0	73-00 METAL GLAZE	10 K	5%	1/10W					
					SG501	1-519-422-11	GAP, SPARK		
R1002 1-216-	049-91 METAL GLAZI	E1K	5%	1/10W					
R1601 ∆ 1-202-	719-00 SOLID	1M	20%	1/2W					
R1602 ∆ 1-202-				1/2W	!	<transfor< td=""><td>RMER></td><td></td><td></td></transfor<>	RMER>		
R1603 ∆ 1-202-				1/2W	1				
	417-11 CARBON	1K	5%	1/4W	TENT	W X-4033-083-	2 TRANSFORM	BASSV F	VBACK
111011 1-249-	+1/*11 CANDON	IIX	J /0	1/ -+ v v			1 TRANSFORM		
D1045 4 545 1	00 44 04 020011	00	E0/	4 (4)41					
R1612 1-249-4		68		1/4W	T504		1 TRANSFORM		
R1613 1-249-4		1K	5%	1/4W	T505		1 TRANSFORM		
R1614 1-247-8		100	5%	1/4W	T601	△ 1-431-397-1	1 TRANSFORM	=H, CONVE	HIEH (SHI)
R1801 1-216-6	63-11 METAL CHIP	3.3K	0.50%	61/10W					
R1802 1-216-0	73-00 METAL GLAZE	10K	5%	1/10W	T602	1-431-398-1	1 TRANSFORM	ER, FERRIT	E (PFT)
					T1601	1-431-473-1 1 1	1 TRANSFORM	ER, LINE FII	LTER
R1803 1-216-2	95-91 CONDUCTOR,	CHIP	(2012	2)			1 TRANSFORM		
	25-91 METAL GLAZE			1/10W		•		-,	
	51-11 METAL CHIP	1K		%1/10W					
						<thermist< td=""><td>OB.</td><td></td><td></td></thermist<>	OB.		
_	03-11 CARBON	68		1/4W		< I HEMINIST	0112		
m1808 1-24/-8	15-91 CARBON	220	5%	1/4W	71155	4 007 700	44 THEOMETER	Б	
B					TH501		-11 THERMISTO		tan a sanara sa
	15-91 CARBON	220		1/4W	1		-11 THERMISTO		the state
R1810 1-216-6	43-11 METAL CHIP	470	0.509	%1/10W	TH160	1-809-827	-11 THERMISTO	R, POSITIV	E Districted
R1811 1-216-6	39-11 METAL CHIP	330	0.509	%1/10W					
	43-11 METAL CHIP	470		%1/10W					
	343-11 METAL CHIP	470		%1/10W		<crystal></crystal>	•		
10 1 - 10 (-							
R1.8+/ 1.0+6/	347-11 METAL CHIP	680	0.509	%1/10W	X900	1-567-200-1	1 VIBRATOR, CF	IATRYS	
		100K		%1/10W	7,300	1 007-000-1		OIAL	
_	899-11 METAL CHIP								
	041-00 METAL GLAZE			1/10W					
m 1818 1-216-6	S55-11 METAL CHIP	1.5K	0.50	%1/10 W		************		*********	*****



REF.NO. PART NO	. DESCRIPTION	ν	R	EMARK	REF.NO.	PART NO.	DESCRIPTION	·	RE	MARK
					D1313 D1314 D1315	8-719-920-7	6 DIODE 1S207 6 DIODE 1S207 6 DIODE 1S207	' 6		
C1302 1-136-15	4-11 ELECT 7-00 FILM	22uF 0.022uF 22uF	20% 5%	50V	FL101 FL102 FL103	1-239-973-1	1 FILTER,EMI 1 FILTER,EMI 1 FILTER,EMI			
C1304 1-104-79	4-11 ELECT 2-51 ELECT 4-11 ELECT	33uF 22uF	20% 20% 20%	16V	IC1301	8-759-712-0	6 IC NJM386BE)		
C1307 1-126-51 C1308 1-104-79 C1309 1-126-51	7-00 FILM 4-11 ELECT 2-51 ELECT 4-11 ELECT 7-00 FILM	0.022uF 22uF 33uF 22uF 0.022uF	5% 20% 20% 20% 5%	16V	J1301 J1302 J1303	1-562-261-7	1 CONNECTOR 1 CONNECTOR 1 CONNECTOR	R,COAXIAL (BNC)	
C1312 1-104-79 C1314 1-136-15 C1315 1-126-51	4-11 ELECT 2-51 ELECT 7-00 FILM 4-11 ELECT 4-00 ELECT	22uF 33uF 0.022uF 22uF 100uF	20% 20% 5% 20% 20%	16V 50V 16V	J1304 J1305 J1306 J1307 J1308	1-562-261-7 1-766-738-1 1-766-738-1	T CONNECTOR TONNECTOR BNC (WITH S BNC (WITH S BNC (WITH S	R,COAXIAL (SW) SW)		
C1321 1-126-30 C1322 1-136-16 C1325 1-136-11	4-00 ELECT 1-11 ELECT 5-00 FILM 6-00 FILM 4-00 ELECT	100uF 1uF 0.1uF 0.047uF 100uF	20% 20% 5% 5% 20%	50V 50V 50V	J1309 J1310 J1313	1-766-738-1	1 BNC (WITH S 1 BNC (WITH S 1 DC JACK			
C1329 1-124-58 C1330 1-124-58 C1331 1-124-58 C1332 1-104-39 C1333 1-124-23	4-00 ELECT 4-00 ELECT 4-00 ELECT 4-00 ELECT 6-11 ELECT 4-00 ELECT	100uF 100uF 100uF 100uF 10uF 22uF	20% 20% 20% 20%	10V 10V 10V	L1301 L1310 L1311 L1312 L1313 L1314 L1315	1-410-749-3 1-410-749-3 1-410-749-3 1-410-749-3 1-410-749-3	31 INDUCTOR 31 INDUCTOR 31 INDUCTOR 31 INDUCTOR 31 INDUCTOR 31 INDUCTOR 31 INDUCTOR	100UH 0.27UH 0.27UH 0.27UH 0.27UH 0.27UH 0.27UH		
C1336 1-102-82	84-00 ELECT 20-00 CERAMIC	22uF 330PF	20% 5%	16V 50V		<transis< td=""><td></td><td></td><td></td><td></td></transis<>				
<conni CN13O1 * 1-564-52 CN13O2 * 1-564-52 CN13O3 * 1-564-53 CN13O4 * 1-560-06</conni 	27-11 PLUG,CONN 18-11 PLUG,CONN	IECTOR 12I IECTOR 3P	P		Q1301 Q1302 Q1303 Q1304 Q1305	8-729-119-3 8-729-119-3 8-729-119-3	78 TRANSISTOI 78 TRANSISTOI 78 TRANSISTOI 78 TRANSISTOI 78 TRANSISTOI R>	R 2785-HFE R 2785-HFE R 2785-HFE		
	> 20-76 DIODE 1S20 20-76 DIODE 1S20				R1301 R1302 R1303	1-214-702-0 1-249-438- 1-249-440-	11 METAL	75 56K 82K	1% 5% 5%	1/4W 1/4W 1/4W
D1304 8-719-9	20-76 DIODE 1S20 20-76 DIODE 1S20 20-76 DIODE 1S20	76			R1305 R1306 R1307	1-249-422- 1-249-401- 1-214-702-	11 METAL	2.7K 47 75	5% 5% 1%	1/4W 1/4W 1/4W
D1306 8-719-9 D1307 8-719-9	20-76 DIODE 1320 20-76 DIODE 1S20 20-76 DIODE 1S20 20-76 DIODE 1S20)76)76			R1308 R1309 R1311 R1312	1-249-438- 1-249-440- 1-249-422- 1-249-401-	11 METAL 11 METAL 11 METAL	56K 82K 2.7K 47	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W
D130S 8-719-9 D131C 8-719-9 D131 3 8-719-9	20-76 DIODE 1S20 20-76 DIODE 1S20 20-76 DIODE 1S20 20-76 DIODE 1S20	076 076 076			R1313 R1314 R1315	1-214-702- 1-249-438- 1-249-440-	00 METAL 11 METAL	75 56K 82K	1% 5% 5%	1/4W 1/4W 1/4W



▲および □ 印の部品は、安全性を維持するために、重要な部品です。従って交換時は、必ず指定の部品を使用して下さい。

Les composants identifiés per un tramé et une marque \(\underset \) sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié. The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

REF.NO.	N .	REMARK						
R1317 R1318	1-249-422-1 1-249-401-1		2.7K 47	5% 5%	1/4W 1/4W			
R1319 R1320 R1321	1-215-428-00 1-249-421-1 1-249-429-1	1 METAL	2.0K 2.2K 10K	1% 5% 5%	1/4W 1/4W 1/4W			
R1322 R1323	1-247-807-3 1-249-401-1		100 47	5% 5%	1/4W 1/4W			
R1324 R1325 R1331 R1337 R1338	1-249-413-1 1-215-428-00 1-214-775-00 1-215-460-00 1-215-373-3	0 METAL 0 METAL 0 METAL	470 2.0K 82K 43K 10	5% 1% 1% 1% 1%	1/4W 1/4W 1/4W 1/4W 1/4W			
R1339 R1340 R1341 R1342	1-215-469-00 1-215-473-00 1-215-437-00 1-215-425-00	0 METAL 0 METAL	100K 150K 4.7K 1.5K	1% 1% 1% 1%	1/4W 1/4W 1/4W 1/4W			
RV1301		RESISTOR>	PPON	10K	()(01)			
NVISOI	<switch></switch>	T RES,ADJ,CA	RDON	IUK	(VOL)			
SW1301 1-571-729-11 SWITCH, SLIDE (LOCK) SW1302 1-692-539-11 SWITCH, KEY BOARD (DC OUT)								
********	*******	******	*****	*****	******			

MISCELLANEOUS

1-251-335-11 SOCKET, CRT

△ 1-251-381-11 INLET, AC (3P)

△ 1-409-799-11 COIL, DEMAGNETIZATION

 Δ 1-416-290-11 COIL, LANDING CORRECTION (LCC)

△ 1-452-756-11 NECK ASSY (NA293)

1-505-569-11 SPEAKER (2.85X4CM)

△ 1-534-754-00 CORD, POWER 7 A/120 V (J)

△ 1-540-005-21 CAP ASSY, HIGH VOLTAGE

△ 1-551-631-22 CORD, POWER 6 A/250 V (AEP)

△ 1-558-527-11 CPRD. PWER 13 A/125 V (U/C)

1-698-756-11 MOTOR, DC FAN

1-698-932-11 FAN, DC

▲ 1-762-300-11 SWITCH, AC POWER SEESAW

△8-451-469-21 DEFLECTION YOKE Y15FRF2M2

V901 △8-734-832-05 PICTURE TUBE 15FRF(MIZ) (U/C, AEP)

V901 △ 8-734-832-00 PICTURE TUBE 15FRF(MIZ) (J)